

CARBONITE

Carbonite Black Operation Manual

v14.0

Thank You For Choosing Ross

you know in your heart is right. (You may rent helicopters if necessary.)

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

1. Provide a Superior Customer Experience
 - offer the best product quality and support
2. Make Cool Practical Technology
 - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at solutions@rossvideo.com.



David Ross

CEO, Ross Video

dross@rossvideo.com

Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis.
If there's no one to authorize the required action in times of company or customer crisis - do what

Document Information

- Ross Part Number: **4804DR-110-14.0A**
- Release Date: January, 2020. Printed in Canada
- Equipment: This document applies to all Carbonite Black frames and control panels.

Copyright

©2020 Ross Video Limited, Ross[®], MiniME[™], and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Microsoft[®], Windows[®], and Windows XP[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Macintosh[®], and OS X[®] are trademarks of Apple Inc., registered in the U.S. and other countries.

Google Chrome[™], Google[®], and the Google logo are registered trademarks of Google Inc.

Patents

Patent numbers US 7,034,886; US 7,508,455; US 7,602,446; US 7,802,802 B2; US 7,834,886; US 7,914,332; US 8,307,284; US 8,407,374 B2; US 8,499,019 B2; US 8,519,949 B2; US 8,743,292 B2; US D752,530 S; GB 2,419,119 B; GB 2,447,380 B; and other patents pending.

Important Regulatory and Safety Notices to Service Personnel

Before using this product and any associated equipment, refer to the “**Important Safety Instructions**” listed in the front of your *Setup Manual* to avoid personnel injury and to prevent product damage.

Warranty and Repair Policy

Ross Video Limited (Ross) warrants its switchers and related options, to be free from defects under normal use and service for a period of ONE YEAR

from the date of shipment. Fader handle assemblies are warranted for the life of the product. If an item becomes defective within the warranty period Ross will repair or replace the defective item, as determined solely by Ross.

Warranty repairs will be conducted at Ross, with all shipping FOB Ross dock. If repairs are conducted at the customer site, reasonable out-of-pocket charges will apply. At the discretion of Ross, and on a temporary loan basis, plug in circuit boards or other replacement parts may be supplied free of charge while defective items undergo repair. Return packing, shipping, and special handling costs are the responsibility of the customer.

Software upgrades for switchers may occur from time to time, and are determined by Ross Video. The upgrades are posted on the Ross Video website, and are free of charge for the life of the switcher.

This warranty is void if products are subjected to misuse, neglect, accident, improper installation or application, or unauthorized modification.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profit). Implied warranties, including that of merchantability and fitness for a particular purpose, are expressly limited to the duration of this warranty.

This warranty is TRANSFERABLE to subsequent owners, subject to Ross Video's notification of change of ownership.


Environmental Information

Waste Electrical and Electronic Equipment Directive (WEEE Directive)

The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Ross Video for more information on the environmental performances of our products.

Use of Hazardous Substances in Electrical and Electronic Products (China RoHS)

Ross Video Limited has reviewed all components and processes for compliance to:

“Management Methods for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products” also known as China RoHS.

The “Environmentally Friendly Use Period” (EFUP) and Hazardous Substance Tables have been established for all products. We are currently updating all of our Product Manuals.

The Hazardous substances tables are available on our website at: <http://www.rossvideo.com/about-ross/company-profile/green-practices/china-rohs.html>

电器电子产品中有害物质的使用

Ross Video Limited 按照以下的标准对所有组件和流程进行了审查：

“电器电子产品有害物质限制使用管理办法” 也被称为中国RoHS。

所有产品都具有“环保使用期限”(EFUP) 和有害物质表。目前，我们正在更新我们所有的产品手册。

有害物质表在我们的网站：<http://www.rossvideo.com/about-ross/company-profile/green-practices/china-rohs.html>

Company Address

Ross Video Limited — 8 John Street Iroquois, Ontario, Canada, K0E 1K0

Ross Video Incorporated — P.O. Box 880, Ogdensburg, New York, USA, 13669-0880

General Business Office: (+1)613-652-4886

Fax: (+1)613-652-4425

Toll Free Technical Support (North America): 1-844-652-0645

Toll Free Technical Support (International): +800 1005 0100

Technical Support: (+1)613-652-4886

After Hours Emergency: (+1)613-349-0006

E-Mail (Support): techsupport@rossvideo.com

E-Mail (General): solutions@rossvideo.com

Website: www.rossvideo.com

Technical Support

At Ross Video, we take pride in the quality of our products, but if a problem does occur, help is as close as the nearest telephone.

Our 24-Hour Hot Line service ensures you have access to technical expertise around the clock. After-sales service and technical support are provided directly by Ross Video personnel. During business hours (eastern standard time), technical support personnel are available by telephone. Outside of normal business hours and on weekends, a direct emergency technical support phone line is available. If the technical support personnel who is on call does not answer this line immediately, a voice message can be left and the call will be returned shortly. Our Technical support staff are available to react to any problem and to do whatever is necessary to ensure customer satisfaction.

Supporting Documentation

Ross Video provides a wide variety of helpful documentation for the setup and support of your equipment. Most of this documentation can be found either on the Product Resources disk that came with your equipment, on the Ross Video website (www.rossvideo.com), or on the Ross Video Community site (discussions.rossvideo.com/)

- **Carbonite Online Help for DashBoard** — visit help.rossvideo.com/carbonite
- **Operation Manual (4804DR-110)** — operational instructions for all Carbonite Black switchers
- **Setup Manual (4804DR-120)** — setup and configuration instructions for Carbonite Black and Carbonite Black+ frames
- **Carbonite Black QuickStart Poster (4804DR-200)** — setup information and specifications for the Carbonite Black and Carbonite Black+ frames

- **Upgrade Notes (4802DR-500)** — upgrade instructions, new features, and known issues for a given software version
- **Software Licenses (4802DR-502)** — third-party software licences
- **Carbonite Multilingual Safety Information (4802DR-503)** — translated product safety information
- **Carbonite Frame Fan Replacement (4802DR-300)** — instructions for replacing cooling fans in the Carbonite, Carbonite+, Carbonite MultiMedia, Carbonite Black, or Carbonite Black+ frames
- **Carbonite Frame RAM Replacement (4802DR-301)** — instructions for replacing the RAM in the Carbonite, Carbonite+, or Carbonite MultiMedia frames
- **Control Panel Desk Mounting (4802DR-302)** — desk mounting instructions for Carbonite control panel
- **SideBox Installation (4802DR-304)** — installation and mounting instruction for SideBox module
- **Auxiliary Control Panel Installation (4802DR-305)** — installation and mounting instruction for remote aux panel (CPS-AUX-053B)
- **GVG100 Supported Command (4802DR-401)** — connection and GVG100 commands supported by the switcher
- **RossTalk Commands (4802DR-403)** — supported commands using RossTalk protocol
- **Device Setup Sheets (4802DR-6xx)** — setup information for controlling external devices from the switcher
- **Robotic Camera Control (4802DR-131)** — overview of the operational interface when controlling a robotic camera from the switcher
- **Audio Mixer Control (4802DR-132)** — overview of the operational interface when controlling an audio mixer from the switcher
- **Video Server Control (4802DR-133)** — overview of the operational interface when controlling a video server from the switcher
- **Configuration Guide (4804DR-100)** — product description and marketing codes for switchers and options
- **CarboNET Installation (4805DR-100)** — installation instructions for the Carbonite PMC translator.
- **Carbonite Operation Manual (4802DR-110)** — operational instructions for all Carbonite switchers
- **Carbonite Black Operation Manual (4804DR-110)** — operational instructions for all Carbonite Black switchers
- **Carbonite Setup Manual (4802DR-120)** — setup and configuration instructions for Carbonite, Carbonite+, and Carbonite MultiMedia frames
- **Carbonite eXtreme Setup Manual (4803DR-120)** — setup and configuration instructions for Carbonite eXtreme frames
- **Carbonite Black Setup Manual (4804DR-120)** — setup and configuration instructions for Carbonite Black frame
- **Carbonite QuickStart Poster (4802DR-200)** — setup information and specifications for the Carbonite, Carbonite+, and Carbonite MultiMedia frames
- **Carbonite eXtreme QuickStart Poster (4803DR-200)** — setup information and specifications for the Carbonite eXtreme frame
- **Carbonite Black QuickStart Poster (4804DR-200)** — setup information and specifications for the Carbonite Black frames
- **Carbonite Upgrade Notes (4802DR-500)** — upgrade instructions, new features, and known issues for a given software version.
- **Carbonite Black Upgrade Notes (4804DR-500)** — upgrade instructions, new features, and known issues for a given software version.
- **Carbonite eXtreme Upgrade for NK-3G144-X** — upgrade instructions for the NK-3G144-X router to a Carbonite eXtreme switcher
- **Software Licenses (4802DR-502)** — third-party software licences
- **Carbonite Multilingual Safety Information (4802DR-503)** — translated product safety information
- **Carbonite Frame Fan Replacement (4802DR-300)** — instructions for replacing cooling fans in the Carbonite, Carbonite+, Carbonite MultiMedia, or Carbonite Black frames
- **Carbonite Frame RAM Replacement (4802DR-301)** — instructions for replacing the RAM in the Carbonite, Carbonite+, or Carbonite MultiMedia frames
- **Control Panel Desk Mounting (4802DR-302)** — desk mounting instructions for Carbonite control panel
- **SideBox Installation (4802DR-304)** — installation and mounting instruction for SideBox module
- **Auxiliary Control Panel Installation (4802DR-305)** — installation and mounting instruction for remote aux panel (CPS-AUX-053B)

-
- **GVG100 Supported Command (4802DR-401)** — connection and GVG100 commands supported by the switcher
 - **RossTalk Commands (4802DR-403)** — supported commands using RossTalk protocol
 - **Device Setup Sheets (4802DR-6xx)** — setup information for controlling external devices from the switcher
 - **Robotic Camera Control (4802DR-131)** — overview of the operational interface when controlling a robotic camera from the switcher
 - **Audio Mixer Control (4802DR-132)** — overview of the operational interface when controlling an audio mixer from the switcher
 - **Video Server Control (4802DR-133)** — overview of the operational interface when controlling a video server from the switcher
 - **Carbonite Configuration Guide (4802DR-100)** — product description and marketing codes for switchers and options
 - **Carbonite Black Configuration Guide (4804DR-100)** — product description and marketing codes for switchers and options
 - **CarboNET Installation (4805DR-100)** — installation instructions for the Carbonite PMC translator.

Contents

Features..... 9

Clean Feed Output.....	9
Custom Controls.....	9
Device Control.....	9
DVE (Fly Key).....	9
Effects Dissolve.....	9
General Purpose Interface (GPI).....	9
LiveEDL.....	9
Matte/Wash Generator.....	9
ME Effect System.....	9
Media-Store.....	9
MediaManager.....	10
MediaWipe.....	10
MemoryAI Recall Mode.....	10
Memory System.....	10
MiniME™.....	10
MultiViewer.....	10
Tally Outputs.....	11
UltraChrome 2.....	11
XPression Live CG.....	11

Control Panel Overview..... 12

Carbonite Black Control Panels.....	12
CB9 Panel Top.....	13

Menu System..... 14

Menu Navigation.....	14
Auto-Follow Menus.....	14

Switcher Basics..... 15

Audio and Video Processing.....	15
Video Processing and Flow.....	15
Audio Processing and Flow.....	15
Video Sources.....	15
To Select a Source on a Bus.....	16
Video Layering.....	16
Re-Entry.....	16
FlexiClean Clean Feed.....	17
Video Preview.....	17
MultiViewer.....	17

DashBoard..... 18

Status.....	18
Configuration.....	18
Live Assist.....	18
PanelLINK.....	18
Custom Controls.....	18
MediaManager.....	18

ViewControl..... 19

ViewControl Overview.....	19
Custom Control Buttons.....	19
Bus Selection Buttons.....	19
Keyer Transition Buttons.....	19
Transition Buttons.....	19
Custom Control Button Setup.....	19
To Set up the Custom Control Buttons.....	20

Transitions..... 21

Performing Transitions.....	21
Understanding the Transition Menu.....	21

To Perform a Transition.....	21
To Override the Pre-Delay Setting.....	22
To Abort a Transition During the Pre-Delay.....	22
Cut Transitions.....	23
Dissolve Transitions.....	23
To Set Up a Dissolve.....	23
WhiteFlash.....	23
To Set Up a WhiteFlash.....	23
Wipe Transitions.....	24
To Set Up a Wipe.....	24
To Apply a Border to a Pattern.....	24
DVE Transitions.....	25
To Set Up a DVE Transition.....	25
MediaWipe Transitions.....	25
To Set Up a MediaWipe.....	26
To Set the MediaWipe Layer.....	26
Transition Limits.....	27
To Set Up a Transition Limit.....	27
GPI Output Triggers.....	27
To Manually Trigger a GPI Output.....	27
To Override a GPI Output.....	28

Patterns, Washes, and Mattes..... 29

Patterns.....	29
To Set Up a Pattern.....	29
Washes.....	29
To Set Up a Wash.....	29
Mattes.....	29
To Set Up a Matte Color.....	30

Keying..... 31

Understanding the Keying Menu.....	31
Self Keys.....	32
To Set Up a Self Key.....	32
Auto Select Keys.....	32
To Set Up an Auto Select Key.....	32
UltraChrome 2 Chroma Key.....	33
To Select the Chroma Key on a Keyer.....	33
To Set Up a Chroma Key.....	33
DVE Keys.....	35
To Set Up a DVE Key.....	35
To Apply a DVE to a Key (Fly Key).....	36
To Apply a Border to a DVE Key.....	36
Masks.....	37
To Box Mask a Key.....	37
Split Keys.....	37
To Set Up a Split Key.....	37
Key Copy.....	38
To Copy a Key.....	38
Key Swap.....	38
To Perform a Key Swap.....	38

Memory Functions..... 39

Memory Access Mode.....	39
To Set the Memory Access Mode.....	39
Storing Memories.....	39
To Store a Memory.....	39
To Store a Memory on the Effects Memory Area.....	39
To Store a Memory on the Global Memory Area.....	39
Recalling Memories.....	40
To Recall a Memory.....	40
To Recall a Memory on the Effects Memory Area.....	40
To Recall a Memory on the Global Memory Area.....	40
Memory Recall Mode.....	41
To Set Up the Recall Mode Memory Attribute.....	41
To Set the Effects Duration.....	41
Memory Attributes.....	41
To Set the Program Bus Source Attribute.....	42
To Set the Preset Bus Source Attribute.....	42

To Set the Transition Type Attribute.....	42
To Set the Next Transition Attribute.....	42
To Set the Run Auto Trans Attribute.....	42
To Set the Key Bus Sources Attribute.....	42
To Set the Key On-Air Attribute.....	42
To Set the Key Type Attribute.....	43
To Set the Key Mask Attribute.....	43
To Set the Media-Store Attribute.....	43
To Set the Aux Bus Attribute.....	43
To Set the Camera Shot Attribute.....	43
To Set the Chroma Key Override Attribute.....	43
To Set the Roll GPO Attribute.....	44
To Set the Roll VTR Attribute.....	44
Clear Memories.....	44
To Clear the Memory Registers.....	44

Index.....	62
-------------------	-----------

Switcher Sets.....	45
To Store a Set.....	45
To Load a Set.....	45

Media-Store.....	46
Working With Media-Store Animations.....	46
Working With Media-Store Audio.....	46
Media-Store Audio Output.....	46
To Assign Media-Store Audio to an AES	
Output.....	47
Loading Stills or Animations.....	47
Media-Store File Specifications.....	47
To Load a Still or Animation.....	47
Media-Store Capture.....	48
To Capture a Still.....	48
Media-Store Attributes.....	48
Understanding the Attributes Menu.....	48
To Set Media-Store File Attributes.....	49
To Lock a Media Number Place and Bank.....	49
MediaManager.....	50
Using MediaManager.....	50
The MediaManager Window.....	50

Custom Controls.....	52
Custom Control Setup.....	52
To Set Custom Control Options.....	52
Recording Custom Controls.....	52
To Record a Custom Control.....	52
Special Functions.....	52
To Insert a Special Event into a Custom	
Control.....	53
Running a Custom Control.....	54
To Run a Custom Control.....	54
Editing a Custom Control.....	54
To Edit a Custom Control.....	54
Naming Custom Controls.....	55
To Name a Custom Control.....	55
Deleting Custom Controls.....	55
To Delete a Custom Control.....	55
Copying and Pasting Custom Controls.....	55
To Copy and Paste a Custom Control.....	55

Switcher Soft Reset.....	57
Soft Reset.....	57
To Reset the Switcher Software.....	57
Custom Reset Settings.....	57
To Save a Custom Reset Setting.....	57
To Load a Custom Reset Setting.....	57
Factory Default Settings.....	58
To Factory Reset the Switcher.....	58
Resetting Individual Components.....	58

Glossary.....	59
----------------------	-----------


Features

Thank you for buying a Ross Video Carbonite Black Series Multi-Definition Live Production Switcher. The Carbonite Black series builds on the Ross Video reputation for designing switchers that fit the needs of any production environment.

Clean Feed Output

Clean feed is typically used for bilingual and live-to-tape productions. It provides a second Program output that is derived from a different location than the standard program output. A frequent application is the recording of shows for later airing without call-in phone numbers inserted.

The clean feed output can come from before or between the keys.



Custom Controls

This feature brings the power of macros to the switcher operator. Button presses, menu selections, event commands, or even the switcher state can be recorded to a custom control with pauses or holds between the events. A simple button press can play these events back again. Step through complex show openings as easily as pressing Custom Control buttons 1, 2, then 3.

Device Control

The switcher can control a number of external devices, such as video servers and robotic cameras. For a complete list of supported devices, and information on how to set up and control these devices, visit the Ross Video website (help.rossvideo.com/carbonite-device).


DVE (Fly Key)

The advanced 2D DVE comes standard with each switcher, and can be used for performing over the shoulder, or picture in picture shots. This allows all key types to be zoomed, cropped, and repositioned horizontally and vertically to create the look you want, or you can use one of the useful pre-built 2D effects to perform 2D background transitions.

Effects Dissolve

The Effects Dissolve feature allows you to interpolate from one memory to another using a memory recall.

The switcher will interpolate from the starting memory to the destination memory, creating a smooth, two key frame effect.

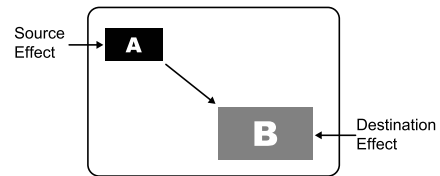

Only elements such as clip level and pattern position can be interpolated in the effects dissolve. Other elements, such as crosspoint selection and next transition data are recalled first, and then the switcher will slew to the recalled memory.

An effects dissolve can be performed on as many elements and MEs as required, based on the memory that is being recalled.

General Purpose Interface (GPI)

The switcher is equipped with 34 GPI I/Os that can be assigned as either an input or output independently.

The GPI inputs allow the switcher to interface with peripheral equipment such as editors. Each GPI input can be used to perform simple editing and switcher functions such as fade to black or an auto transition.

LiveEDL

Edit Decision Lists (EDL) are files used by non-linear editing (NLE) suites to aid in post-production. Your switcher can capture EDL data in a file that you load into your NLE suite.

Matte/Wash Generator

A matte generator and complex wash generator per ME, capable of multi-color washes comes standard. Any one of the color generators can be assigned to MATTE. An additional simple color generator is available for an Aux Bus.

ME Effect System

The ME (Multi-level Effect) systems are standard. The number of MEs depends on the chosen switcher model.

Media-Store

Up to 2 independent channels of still/animations are available switcher-wide, allowing for thousands of full screen stills and logos that can be cached and used on the switcher.

Media-Store provides 8 GB of cache. The number of images cached increases considerably when smaller,

non-full screen images like logos are loaded from USB.

MediaManager

The MediaManager allows you to easily manage stills and animations on the switcher in a graphics interface.

MediaWipe

A MediaWipe allows you to use an animation from the Media-Store to play over a background or key transition. When the transition starts, the switcher plays the selected animation over top of the background and keys that are being transitioned. A cut, dissolve, wipe, or DVE wipe is then performed layered under the animation to bring up the next shot when the animation ends.

MemoryAI Recall Mode

We take the guessing out of memory recalls by ensuring that a memory recall will not affect what is currently on-air. MemoryAI uses the content of the memory to configure the Next Transition area and Preview bus for the background and keyers so that the next transition takes the same sources on-air that were on-air in the memory.

For example, store a memory that has a key on-air with CAM1 and CAM2 selected on the background. When this memory is recalled normally, it pops the same key on-air with CAM1 and CAM2 on the background. When the memory is recalled with MemoryAI turned on, CAM1 is selected on the preset bus, and CAM2 is selected on a key that is not on-air. The transition area is then set up for a background transition to bring CAM2 onto the background, take any on-air keys off, and take a key on-air with CAM1.

Memory System

Storage for 100 complete switcher snapshots per ME, MiniME™, and chroma key comes standard with all switchers. All of these memories can be stored to a USB media drive, providing custom tailored memories for every operator and every show.

MiniME™

The MiniME™ is an additional ME that is provided with the switcher to perform basic dissolves and cuts. Each MiniME™ has 2 keyers, background, and preset buses. Unlike a full ME, the MiniME™ only supports dissolves and cuts. The MiniME™ shares all the same sources as the ME.

MultiViewer

Each MultiViewer allows you to view up to 16 video sources, in 45 different layouts, from a single output BNC. Any video source on the switcher, including ME Program, Preview, and Media-Store channels, can be routed to any box on the MultiViewer. All boxes on the MultiViewer output include mnemonic source names and red and green tallies.

The Carbonite Black comes standard with 1 broadcast-quality integrated MultiViewer generator and the Carbonite Black+/Carbonite Black+ 12G come standard with 4. The additional MultiViewer outputs on the Carbonite Black+/Carbonite Black+ 12G are only available on dedicated output BNCs and only support 10 boxes. Each of these MultiViewer outputs has a specific range of input and output BNCs that can be assigned to boxes on the MultiViewer.

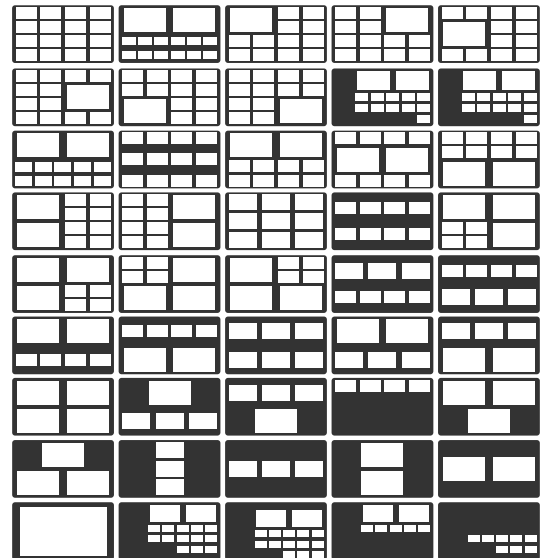


Figure 1: HD Layouts

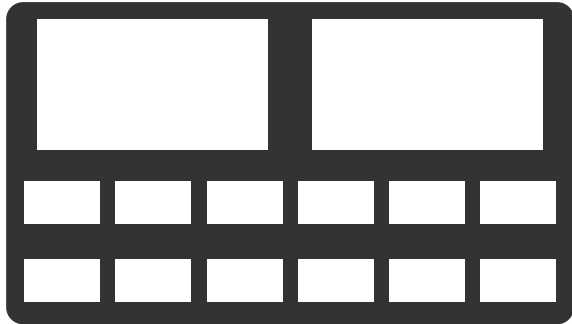


Figure 2: MultiViewer Grid

Note: The MultiViewer is output in 1080p 50 or 59.94Hz only.

Tally Outputs

The switcher has 34 assignable tally relays located in the rack frame. Each tally can be assigned to any number of combinations of input and output or bus.

UltraChrome 2

The UltraChrome 2 chroma keyers uses advanced video processing technology to provide exceptional blue spill reduction and clean edges, even with difficult source material. Glass, smoke, translucent materials, and natural shadows are handled superbly.

The 2 UltraChrome 2 chroma key engines can be selected on any bus as a source or have the generated video and alpha output to a downstream device, such as a video server.

XPression Live CG

Seamlessly combine the creative power of the Ross® XPression Designer software with the ease of use of your Ross® switcher. Create stunning still graphics using XPression Designer, and transfer them directly to an media-store channel on the switcher using the RossLinq interface. Up to two (2) channels with dedicated alpha can be controlled from the XPression Software Client. This feature supports still images only.

Each switcher comes with a single license of XPression. Additional licenses can be ordered.

Control Panel Overview

This chapter provides a basic introduction to the control panel, including an overview of the different areas on the control panel, using the menu system, as well as an introduction to the various ports, and video buses.

Carbonite Black Control Panels

Each Carbonite Black control panel is made up of a number of distinct areas that control different aspects of the switcher. Some of these areas may vary in size or function, depending on the control panel you have.

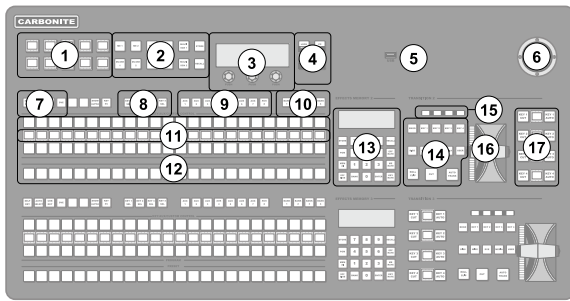


Figure 3: CB2S Control Panel

- 1. Menu Selection Buttons** — These mnemonic buttons are used to access switcher menus and select wipe patterns.
- 2. Global Memory** — These buttons are used to store or recall memories to one or more MEs at the same time. On the CB1 and CB2 control panels there are only store and recall buttons for MEs 1 and 2.

Note: The **ME 2**, **ME 3**, **MiniME 3**, **MiniME 4**, **MULTI SCN 1**, and **MULTI SCN 2** buttons are not implemented at this time.

- 3. Main Display and Selection Knobs** — The three selection knobs are used to adjust and select various menu items or values. The knobs are rotated to choose a value, and pressed to make a selection. The main display shows the menu system of the switcher.
- 4. Menu Navigation Buttons** — These buttons are used to access switcher menus and move back and forth between menus.
- 5. USB** — The USB port on the control panel can be used to store and recall sets, copy logs, and perform upgrades.
- 6. Positioner** — The positioner is used to position and size keys in the DVE, control some wipe, border, and wash parameters, as well as control some external devices.

- 7. Key Type Buttons** — These buttons are used to choose the type of key you want to use. Use these buttons with the key select buttons to select the keyer and the type of key you want to use.
- 8. Key Select Buttons** — These buttons are used to choose which keyer is selected. The key type buttons and key bus follow the selected keyer. These are user select buttons can be assigned to other functions if required.
- 9. ME/Aux Selection Buttons** — These buttons are used to assign the control panel row to an ME, MiniME™, chroma key, or Aux. These are user select buttons can be assigned to other functions if required.
- 10. Custom Control Bank Select Buttons** — These buttons are used to choose which custom control bank is selected. The custom control bus follows the selected custom control bank. These are user select buttons can be assigned to other functions if required.
- 11. Mnemonic Displays** — The mnemonic display shows the name of the source, or custom control, assigned to the button directly below it. The mnemonic display-name and color for each video source or custom control can be adjusted.
- 12. Video Source Buses** — These buses are broken into the Preset, Program, and Key/Aux/Custom Control buses. The Preset bus is the bottom row of source buttons and selects the video source that will be taken on-air with the next background transition. The Program bus is the middle row of source buttons and selects the video source that is currently on-air on the background. The Key/Aux/Custom Control bus is the top row of source buttons and selects the video source that is chosen on the selected keyer or aux bus, or the custom control that is chosen on the selected custom control bank.
- 13. Effects Memory** — These buttons are used to store and recall memories on the assigned ME, and to select the various transition rates used on the switcher. These buttons are assigned to the ME that the panel row has been assigned to.
- 14. Transition Area** — These buttons are used to select which video source buses will be included in the next transition and what type of transition will be performed. The Cut and Auto Trans buttons are used to perform transitions. The user button is not implemented at this time.
- 15. On-Air Lights** — These lights glow red to show which keyers are currently on-air.

16. **Manual Transition Fader Bar** — The fader is used to manually control the rate of a transition. What is being transitioned, and the type of transition, are controlled from the Transition Area.
17. **Keyer Transitions Buttons** — These buttons are used to perform cuts or auto transitions on keys directly, without having to include them as part of the next transition.

CB9 Panel Top

The CB9 control panel is made up of a number of distinct areas that control different aspects of the switcher.

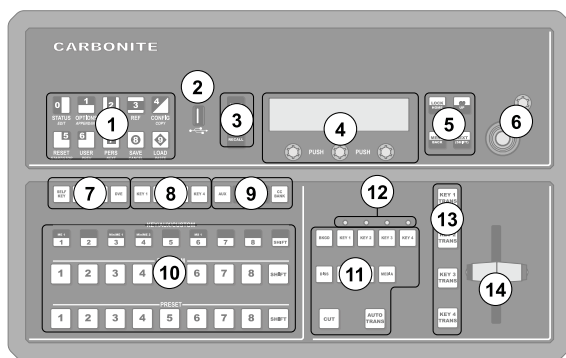


Figure 4: Carbonite Black Solo Panel Top

1. **Pattern/Menu Selection Buttons** — These buttons are used to select a pattern for a wipe transition, or to access switcher menus.
2. **USB** — The USB port on the control panel is used for upgrades and media files. .
3. **Memory Store/Recall Buttons** — These buttons are used to store or recall memories.
4. **Main Display and Selection Knobs** — The three selection knobs are used to adjust and select various menu items or values. The knobs are rotated to choose a value, and pressed to make a selection. The main display shows the menu system of the switcher.
5. **Menu Navigation Buttons** — These buttons are used to access switcher menus, move back and forth between menus.
6. **Positioner** — The positioner is used to control some wipe, border, and wash parameters, as well as some external devices. Along with the 2D positioner is a knob used for additional input.
7. **Key Type Buttons** — These buttons are used to choose the type of key you want to use. Use these buttons with the key select buttons to select the keyer, and the type of key you want to use.
8. **Keyer Select Buttons** — By default these user select buttons are used to select which keyer the

panel is assigned to. Each button can be assigned to a different selection.

9. **User Select Buttons** — These user select buttons are used to choose which keyer, aux bus, MiniME™, ME, or custom control bank the panel is assigned to.
10. **Video Source Buses** — These buses are broken into the Preset, Program, and Key/Aux/Custom Control buses. The Preset bus is the bottom row of source buttons and selects the video source that will be taken on-air with the next background transition. The Program bus is the middle row of source buttons and selects the video source that is currently on-air on the background. The Key/Aux/Custom Control bus is the top row of source buttons and selects the video source that is chosen on the selected keyer or aux bus, or the custom control that is chosen on the selected custom control bank.
11. **Transition Area** — These buttons are used to select which video source buses will be included in the next transition and what type of transition will be performed. The Cut and Auto Trans buttons are used to perform transitions.
12. **On-Air Lights** — These lights glow red to show which keyers are currently on-air.
13. **Keyer Transitions Buttons** — These buttons are used to perform auto transitions on keys directly, without having to include them as part of the next transition.
14. **Manual Transition Fader Bar** — The fader is used to manually control the rate of a transition. What is being transitioned, and the type of transition, are controlled from the Transition Area.

Menu System

The menu system is accessed either by pressing **MENU** and the Menu Selection button for the menu you want to access, or through an auto-follow for selected functions.

Menu Navigation

The menu system allows you to access all of the setup and configuration information for the switcher. In some cases, a menu can be accessed either by pressing the **MENU** button and navigating to the menu, or by double-pressing a button on the control panel.

1. Press **MENU**. The Menu Selection mnemonic buttons light up with the names of the menu trees.
2. Press the Menu Selection button for the menu you want to navigate to. The first page of the menu is shown on the display.
3. Press **NEXT** to navigate to the next page of the current menu. If the **NEXT** button is not lit, there are no other pages to the current menu.

*Tip: If you want to return to the first page of a menu, press and hold **NEXT** and press **HOME**. You can also navigate up one level in a menu tree by pressing and holding **NEXT** and pressing **UP**.*

Auto-Follow Menus

The switcher navigates to auto-follow menus automatically when you select certain functions on the switcher. For example, when you select a key the key adjustment menu is shown on the display.

Auto-Follow functionality also applies to video source buttons that have external devices assigned to them. If you select a source button that an external device is assigned to, the peripheral control menu for that specific device is shown.

Switcher Basics

Before using your switcher, it is important to become familiar with how audio and video is handled by the switcher. Some important concepts includes video sources, video layering and re-entry, and preview. For information on setting up video inputs, refer to the Setup Manual that came with your switcher.

Audio and Video Processing

Video and audio signals are processed and passed through the switcher in different ways, depending on how the switcher is being used or is set up. A better understanding of how the switcher is processing these signals help you to achieve the production you want.

Video Processing and Flow

Video is processed in a number of blocks in the switcher. After video comes into the switcher, the frame synchronizers / format converters are applied (depending on the frame you have). At this point any required color correction is also applied. After input the video signal is routed through the crosspoint. The crosspoint can route any input to any output for straight switching, or to the video processor and DVE and back for video manipulation. Just before the video signal is sent to the output, the processing of the ancillary data is performed.

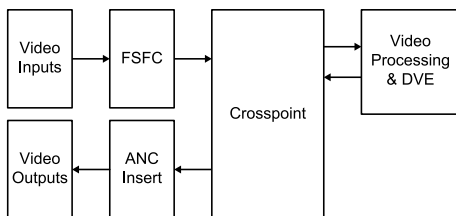


Figure 5: Video Flow Through the Switcher

Audio Processing and Flow

Unlike video, the switcher does not handle audio signals independently. An audio signal is embedded into the ancillary data of a video signal before it comes into the switcher. As the signal comes into the switcher and is manipulated, you must ensure not to perform an operation that will force the ancillary data to be stripped.

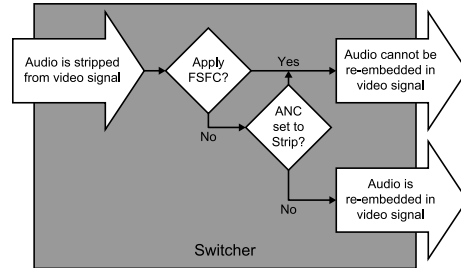


Figure 6: Audio Flow Through the Switcher

The following restrictions apply to ancillary data being included in the output:

- ME program passes ancillary data.
- MultiViewer outputs do not include any ancillary data.
- MiniME™ outputs do not include any ancillary data unless an ME with ancillary data is re-entered onto the background bus.
- ME Preview does not include ancillary data unless the background is not selected as part of the next transition.
- A MiniME™ can include ancillary data if an ME is re-entered onto the background.
- Any format conversion on the input video signal.
- Setting ancillary data to be stripped.

When you are performing a transition, or keying, the embedded audio is carried in the ancillary data of the background video signal. The ancillary data from the background source is replaced with the ancillary data from the preset source, and the ancillary data for keyed sources is stripped.

Note: Audio that comes from the Media-Store, for a MediaWipe for example, is only available on the AES outputs on the frame, and is not embedded into the background video signal.

Video Sources

The switcher has access to two basic types of video sources, external and internal. All video sources can be assigned to video source buttons. By pressing a video source button on a bus, the video source assigned to that button is selected on that bus.

- **External** — External video sources come from cameras, video servers, character generators, or other external devices into the switcher.
- **Internal** — Internal video sources come from internally generated video, such as Media-Store channels, matte color, and black.

To Select a Source on a Bus

To select a video source on a bus, you must identify the ME, MiniME™, Aux, or chroma key and bus you want to assign a video source to, and then press the source button you want to select on that bus.

The user buttons on the control panel can be assigned to an ME, MiniME™, Aux Bus, key bus, or a chroma key engine for quick access. Any of these buttons can also be held to allow you to select the ME, MiniME™, Aux, or chroma key on the key bus.

Tip: Source selection can also be made from the **Buses** tab on the Live Assist node in DashBoard. Key bus source selections can also be made using the **Key Source** button on the **Keyers** tab on the Live Assist node in DashBoard.

1. Select the ME, MiniME™, Aux, chroma key, or keyer that you want to select a source on.

Tip: The user select buttons can be assigned to select any bus on the switcher. If you change what the button is assigned to you should make sure to change the text on the button cap.

- **ME** — press the user button assigned to the ME, or press and hold a user button assigned to an ME/MiniME™ and press **ME1** on the key bus.
- **MiniME™** — press the user button assigned to the MiniME™, or press and hold a user button assigned to an ME/MiniME™ and press a **MinMEX** on the key bus.
- **Aux** — press the user button assigned to the Aux, or press and hold a user button assigned to an Aux and press **AUXx** on the key bus.
- **Chroma Key** — press the user button assigned to the chroma key, or press and hold a user button assigned to a chroma key and press **CKx** on the key bus.

Tip: You can also press **AUXX** and press the knob for the Aux Bus you want to select.

2. Select the bus you want to select a source on.

Note: Ensure that the source selected on the bus you want to enter onto the ME, MiniME™, Aux, chroma key, or keyer is valid for that destination. If the source is not

valid, you will not be able to select the bus on the ME, MiniME™, Aux, chroma key, or keyer.

- **Background Bus** — use the BACKGROUND bus.click **Background**.
 - **Preset Bus** — use the PRESET bus.click **Preset**.
 - **Key Bus** — press **KEY X SEL** to assign the KEY/AUX/CUSTOM CONTROL bus to that keyer.
 - **Aux Bus** — use the KEY/AUX/CUSTOM CONTROL bus.
3. Select the source you want to use on the bus. Use the **Shift** button to access additional sources. Select the type of source you want to assign to the bus and then select the source.

Tip: Double-press the **SHIFT** button to lock the button row to the shifted bus. Press the **SHIFT** button again to return to the non-shifted bus. The Shift-Lock is reset when the ME is reset, but not when a factory default or switcher set is recalled.

- **Physical** — the sources on the physical input BNCs.
- **Internal** — internally generated sources, including re-entries.
- **Aux Follows** — use the source that is selected on selected aux bus.

Related information

[User Buttons](#)

Video Layering

How video is layered in the output of the switcher depends on what keyers are on-air and how MiniME™ outputs are re-entered.

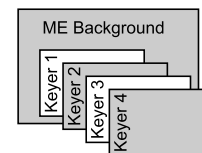


Figure 7: Video Layering

Tip: You can select a MiniME™ on an ME or different MiniME™ to re-enter it. Up to two MiniME™ re-entries, including an ME is allowed.

Re-Entry

Re-entry is the term used to describe the process of selecting a MiniME™ on an ME.

Keep the following in mind when working with re-entries:

- You cannot re-enter an ME, or the Clean Feed of an ME, into itself.

Re-Entry Timing

To maintain proper video timing through the switcher, each MiniME™ exists in a specific timing window relative to the ME. These windows restrict what can be re-entered into what.

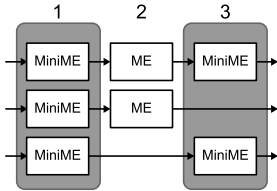


Figure 8: MiniME™ Timing Windows

FlexiClean Clean Feed

FlexiClean provides a second program output that is derived from a different location than the standard program output. A frequent application is the recording of shows for later airing without call-in phone numbers inserted.

The clean feed output can come from before or between the keys.




Figure 9: Clean Feed Modes

Video Preview

Video preview allows you to use an additional monitor to preview what the next shot is going to be. The preview for an ME shows what is selected for the next transition on that ME. This includes the keys and background video sources that will be on-air after the next transition.

MultiViewer

Each MultiViewer allows you to view up to 16 video sources, in 45 different layouts, from a single output BNC. Any video source on the switcher, including ME Program, Preview, and Media-Store channels, can be routed to any box on the MultiViewer. All boxes on the MultiViewer output include mnemonic source names and red and green tallies.

DashBoard

The DashBoard control system allows remote access to multiple pieces of Ross Video equipment, including openGear® cards, Carbonite production switchers, BlackStorm video servers, and ACID UltraChromeHR cameras.

Download and install the latest version of DashBoard from <http://www.opengear.tv/>. Review the documentation that comes with DashBoard for information on installing and launching DashBoard.

Note: Carbonite requires DashBoard v8.0, or higher.

Tip: For detailed instructions on using DashBoard with Carbonite, navigate to the online help at help.rossvideo.com/carbonite.

Status

The Status node provides a read only overview of the state of a number of important switcher components and equipment.

The following items are available on the **Status** node:

- **Software Version** — the current version of the software running on the switcher
- **Serial Number** — the serial number of the frame
- **Engine Type** — the model of frame
- **Video Mode** — the video format that the switcher is operating in
- **Video Reference Source** — the source of video reference to the switcher
- **External Reference** — the video format of the external reference, if connected
- **Reference** — status of whether the switcher has locked to the reference format
- **Ancillary Mode** — how ancillary data is handled (strip or pass)
- **Temperature** — status of the ambient temperature in the frame
- **CPU Temperature (C)** — the temperature of the frame CPU in degrees Celsius
- **FPGA Temperature (C)** — the temperature of the frame FPGA in degrees Celsius
- **I/O FPGA X Temperature (C)** — the temperature of each of the video processing FPGAs in degrees Celsius
- **Fan #1** — status of fan 1 in the frame (left fan)
- **Fan #2** — status of fan 2 in the frame (right fan)
- **Timecode** — the current timecode being received by the switcher
- **RossTalk Server Port** — the network port that the switcher is listening on for RossTalk commands.

- **TSL UMD Server Port** — the network port that the switcher is listening on for TSL UMD commands.
- **Allocated DVEs** — where DVE channels are allocated in the switcher.

Configuration

The Configuration node provides a graphical interface to switcher settings such as Reference, Inputs, Outputs, and MultiViewer. You can switch between the different by selecting the tabs at the bottom of the DashBoard window.

Live Assist

The Live Assist node provides a graphical interface to functions such as keying, transition, and memory settings of the switcher. You can switch between the different settings by selecting the tabs at the bottom of the DashBoard window.

PanelINK

Live Assist can be set to either mirror actions on the switcher control panel, or only show actions on the currently selected ME and Keyer on the current tab. For example, with **PanelINK** turned on, pressing **KEY 1 SEL**, **WIPE**, and then **SELF KEY** causes Live Assist to show the **Keyers** tab, the **Trans** tab, and then the **Keyers** tab again. With **PanelINK** turned off, Live Assist does not switch between tabs.

The **PanelINK** button is located at the bottom right corner of the Live Assist window.

Custom Controls

The Custom Control node provides a graphics interface for recording, editing, and running custom controls.

MediaManager

The MediaManager node allows you to connect to the MediaManager web interface from within DashBoard.

Tip: You can either launch the MediaManager directly using the switcher IP address, or you can access it using the MediaManager node in DashBoard. If you are logging into MediaManager from DashBoard, you must have Microsoft® Internet Explorer® 10, or higher, installed.

ViewControl

The ViewControl interface through DashBoard allows you to coordinate the control over the Carbonite switcher, XPression Live Graphics System, and the BlackStorm Playout Server all through a touchscreen interface. Through ViewControl you can select sources, perform transitions, and run custom controls.

Keep the following in mind when working with ViewControl

- ViewControl requires DashBoard 5.1, or later.
- Only the sources assigned to the MultiViewer boxes are available for direct selection. Custom controls can be used to select other sources.
- A running custom control, or a custom control that is paused or held, are not shown on the ViewControl interface.
- The control panel does not follow key and bus selections made on ViewControl.

ViewControl Overview

The ViewControl interface provides quick access to a number of custom control buttons as well as the transition functionality of the switcher.

Custom Control Buttons

The custom control buttons can be assigned to any custom control on the switcher and given unique names and icons. The button groups on the left (shown below) are organized into groups, or tabs.

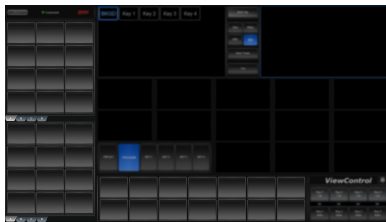


Figure 10: Custom Control Buttons

Related information

[Custom Control Button Setup](#) on page 19

Bus Selection Buttons

The bus selection buttons allow you to select the different buses on different ME outputs of the switcher.

To select a source on a bus, press the bus selection button, and press the box for the source you want to select. For example, to select camera 1 on Key 3, press **Key 3** and then press the box for the camera 1 source.

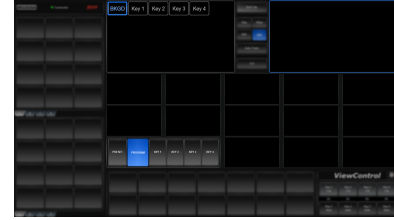


Figure 11: Bus Selection Buttons

Keyer Transition Buttons

The Keyer Transition buttons allow you to perform a cut or dissolve of the keys on the Program bus, without having to include them as part of the next transition. These buttons act the same as the Keyer Transition Buttons on the control panel.

Tip: The Cut buttons turn red when a key is on-air.

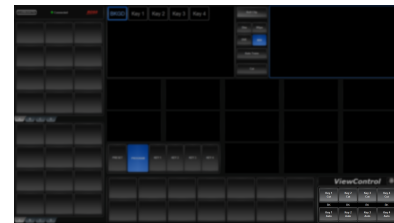


Figure 12: Keyer Transition Buttons

Transition Buttons

The transition buttons allow you to select what is included in the next transition, what type of transition is to be performed, and perform the transition. These buttons function similarly to the buttons in the Transition Area on the control panel.

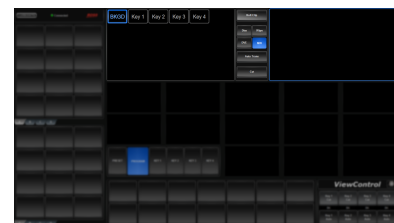


Figure 13: Transition Buttons


Custom Control Button Setup

When you assign a custom control to a button, you can give that button a unique name and assign an icon to it. The images for the icons must be on a USB drive in the frame when you assign them. Once assigned the icons are stored in the frame and the USB can be removed. Each of the tabs can be named.

The configuration of the tabs and custom control assignment to buttons are stored with the switcher personality settings.

To Set up the Custom Control Buttons

If you want to assign icons to the custom control buttons, you must have the images you want to use for the icons stored on a USB drive installed in the frame. After the images have been assigned you can remove the USB drive.

1. Click the  icon.

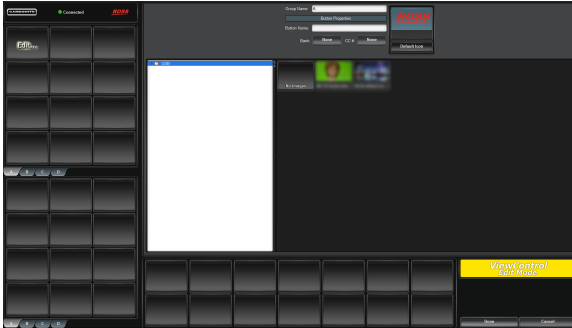


Figure 14: ViewControl Edit Button

2. Press the custom control button that you want to set up.
3. Enter a name for the button in the **Button Name** field.

*Tip: You can change the name of a tab by selecting a button on the tab and then entering a new name in the **Group Name** field.*

4. Click the **Bank** button and select the number of the bank you want to select a custom control from.
5. Click the **CC X** button and select the number of the custom control you want to assign to the button.
6. Navigate the files on the USB drive and click the image you want to assign as the icon for the button.

*Tip: Press **Default Icon** to switch back to the default icon.*

7. Set up additional custom control buttons as required.
8. Press **Done** when you are done setting up custom control buttons.

Transitions

Transitions are used to change the background video and take keys on and off-air. A transition can include any combinations of background and keyers for an ME. The background and each keyer can be transitioned independently and at the same time using the dedicated **KEY CUT** and **KEY AUTO** buttons.

Performing Transitions

What you can include in the transition, and the type of transition you can perform, depend on the number of media resources you have, and if you are performing a background and keyer transition at the same time.

Keep the following in mind when performing transitions:

- If any of the sources going on-air have an assigned GPI output, the GPI output is triggered and the switcher then waits the configured pre-delay interval before performing the transition. If you perform a transition with the fader handle, the GPI output is triggered but the pre-delay interval is ignored.
- If any of the sources going on-air are assigned to a video server, you can have the video server play when the source is taken on-air by using the **RIClip** knob to select **On**.
- If any of the sources going on-air are assigned to a video server, the switcher waits for the configured pre-delay interval before performing the transition. If you perform a transition with the fader handle, the pre-delay interval is ignored.
- If the fader is moved during an auto transition, control of the transition is passed to the fader. You must complete the transition with the fader. This allows you to override any auto transition in progress with the fader.
- A key only transition can be performed by pressing the **KEY CUT** or **KEY AUTO** button for the key you want to transition.
- You can pause an auto transition by pressing the **AUTO TRANS** button during the transition. Press the button again to continue the transition.
- On a MiniME™, Background and key 2 only support Dissolve and Cut transitions.
- There is no preview output for a MiniME™.

Understanding the Transition Menu

When you select a transition type button, the menu system displays a number of options that allow you to adjust how a transition is performed or appears.

The options that are available depend on the type of transition that is selected.

Table 1: Transition Menu Items

Menu Item	Description
Time	selects the amount of time (Transition Rate), in frames, that an auto transition takes
RIClip	selects whether GPI outputs assigned to input sources are triggered before a transition
DisTyp	selects whether the dissolve is a standard dissolve or a WhiteFlash transition.
Dirctn	selects the direction that the wipe is performed (forward or reverse), as well as turns the Flip-Flop feature on or off
Key X	selects the amount of time, in frames, that an auto transition dissolve for the keyer takes
Patrn	selects the pattern for the wipe transition
X Pos	selects the horizontal position for the wipe pattern
Y Pos	selects the vertical position for the wipe pattern
Aspect	selects the aspect ratio for the wipe pattern
Border	turns the border feature on and selects the size of the border on the wipe pattern
Soft	selects the amount of softness that is applied to the wipe border
Load	selects the color for the wipe border from a pre-set list
BHue	adjusts the hue of the wipe border color
BSat	adjusts the saturation of the wipe border color
BLum	adjusts the luminance of the wipe border color
Rot	selects the rotation for the wipe pattern
HMult	multiplies the wipe pattern horizontally (1-32)
VMult	multiplies the wipe pattern vertically (1-32)
Browse	selects an animation for a media transition
Attrib	used with the Value knob to adjust parameters for the MediaWipe (<i>Media-Store Attributes</i> on page 48)
Func	selects how the Attrib adjustments are saved
Limit	turns the Transition Limit feature on or off
Effect	selects the pattern for the DVE transition

Transitions on page 21

To Perform a Transition

All transitions, with the exception of cuts on the background or key bus, have the same basic setup. To

perform a transition, you must select what sources you want to transition on what buses, and how you want the transition to appear.

1. Select the ME or MiniME™ that you want to perform a transition on. Click **Navigation Menu > Live Assist > Buses** and select the ME or MiniME™ that you want to perform a transition on.
2. Select the video sources you want to take on-air on each bus. Select the bus and the source that you want to take on-air on that bus.

For a background transition you must select the source you want to transition to on the preset bus.

3. In the Transition Area, select the elements (**BKGD, KEY 1, KEY 2, KEY 3, KEY 4**) you want to include in the next transition. To select multiple keys and background, press and hold the first element, and select the additional elements. Click **Navigation Menu > Live Assist > ME**.

*Tip: If you want to perform a transition on a MiniME™, click the **MiniME** instead.*

4. Click the **ME X** button for the ME that you want to perform the transition on.
5. Click **Trans**.

*Tip: To perform a key only transition, click a **Key X** button and click the **Cut** or **Auto** button. The auto transition is performed at the rate shown next to the **Auto Trans** button.*

6. Use the **Time** knob to set the length of the background transition. Enter the length of the background transition in the **ME Rate** field, or the length of a key transition in the **Key X Rate** field.
7. Select the type of transition (**DISS** (Dissolve or WhiteFlash), **WIPE, DVE, MEDIA**) you want to perform. Select the type of transition (**Dissolve, Wipe, DVE, Media**) you want to perform.

*Note: The **USER** button is not implemented at this time.*

8. Use the **RIClip** knob to select whether you want any video server clips assigned to a source being taken on-air to play with the transition (**On**), or not (**Off**). Click a **Roll Clip** button to select whether you want any video server clips assigned to a source being taken on-air to play with the transition (**On**), or not (**Off**).
9. Perform the transition.

*Tip: You can preview the transition on the preview output by pressing and holding the transition type button and perform the **Auto Trans** or **Fader** transition. You*

cannot preview the independent key-only transitions or a MiniME™ transition.

- **Auto Transition** — press **AUTO TRANS**. The transition is performed at the set transition rate
- **Auto Trans** — click **Auto Trans**
- **Cut** — press **CUT**
- **Cut** — click **Cut**
- **Fader** — move the fader from one limit to the other. The rate at which you push the fader determines the rate of the transition.

If a pre-delay has been set, the switcher will apply the pre-delay interval before performing the transition.

To Override the Pre-Delay Setting

During the pre-delay time, you can override the pre-delay count and cut the sources on-air immediately.

- While the switcher is waiting for the pre-delay countdown to complete, perform one of the following
 - Press the source button on the background bus that is going-on air. The pre-delay countdown and the transition are aborted and the source is cut to air on the background bus.
 - Initiate a transition with the fader handle. The pre-delay countdown is aborted and the transition proceeds as you move the fader handle.

To Abort a Transition During the Pre-Delay

During the pre-delay time, you can abort the transition completely.

- While the switcher is waiting for the pre-delay countdown to complete, perform one of the following
 - Press any source button on any bus other than the source button on the background bus that is going-on air.
 - Press the **BKGD** or **Key X** button in the next transition area.
 - Press the **CUT** or **AUTO TRANS** button.
 - If a key is included in the transition, press one of the dedicated key transition button.
 - Recall a memory. The pre-delay countdown and transition are aborted and the memory register is recalled.

Cut Transitions

A Cut is an instantaneous transition between video sources. Unlike all the other transition types, there are no intermediate steps between the video source that is on-air, and the video source you are transitioning to.




Figure 15: Example Cut Transition

A cut is performed either by selecting different sources on a background or key bus, or by pressing a **CUT** button.

Dissolve Transitions

A Dissolve is a gradual fade between video sources. For a Background transition, the video signal on the Background bus and the video signal on the Preset bus are mixed together until the Preset bus video signal completely replaces the Background bus video signal.



Figure 16: Example Dissolve Transition

To Set Up a Dissolve

A dissolve transition requires that you set a background and key transition rate for the auto transition. A fader transition does not use the transition rate.

1. Press **DISS**. Click **Navigation Menu > Live Assist > ME > Trans > Dissolve**.

Tip: You can use the same procedure for a MiniME™.

2. Use the **Time** knob to set the length of the background transition. Enter the length of the background transition in the **ME Rate** field, or the length of a key transition in the **Key X Rate** field.

Tip: You can also select a time by pressing one of the 5 through 60 buttons. You can also select a time by clicking one of the 5 through 60 buttons.

*Tip: Press **ME RATE** in the Effects Memory area for the ME you want to change the rate for, use the keypad to enter the new rate, and press **Enter**. (Does not apply to CB1 or CB2.)*

3. Use the **DisTyp** knob to select **Diss**.
4. Press **NEXT**.

5. Use the **Key X** knobs to select the length of the key transitions.

*Tip: Press **KEY RATE** in the Effects Memory area repeatedly to select the Keyer you want to set the rate for, use the keypad to enter the new rate, and press **Enter**. (Does not apply to CB1 or CB2.)*

WhiteFlash

Perform a two-step transition where a dissolve to and from white, or other selected color, is performed in the middle of the transition. The video signal on the Background bus is transitioned to a color background of the selected WhiteFlash color. The color background is then transitioned to the preset bus. WhiteFlash consumes a pattern generator for the transition.

Each ME has a separate WhiteFlash generator.

To Set Up a WhiteFlash

A WhiteFlash transition is performed just like a normal dissolve except that you must set the color for the flash and the rates for the onset, hold, and fade. transition is performed just like a normal dissolve except that you must set the color for the flash and the rates for the onset, hold, and fade.

1. Press **DISS**.

Tip: You can use the same procedure for a MiniME™.

2. Use the **Time** knob to set the length of the background transition. Enter the length of the background transition in the **ME Rate** field, or the length of a key transition in the **Key X Rate** field.

*Tip: Press **ME RATE** in the Effects Memory area for the ME you want to change the rate for, use the keypad to enter the new rate, and press **Enter**. (Does not apply to CB1 or CB2.)*

3. Use the **DisTyp** knob to select **Flash**.
4. Press **NEXT**.
5. Use the **Key X** knobs to select the length of the key transitions.

*Tip: Press **KEY RATE** in the Effects Memory area repeatedly to select the Keyer you want to set the rate for, use the keypad to enter the new rate, and press **Enter**. (Does not apply to CB1 or CB2.)*

6. Press **NEXT > NEXT > NEXT**.

7. Use the **Onset**, and **Offset** knobs to select the percentage of the transition that each phase of the WhiteFlash takes.
 - **Onset** — duration of the dissolve to the WhiteFlash color.
 - **Offset** — duration of the dissolve to the preset video source.
 - **Hold** — duration of the dissolve that the WhiteFlash color is held. This value is the residual of entire duration minus the onset and offset.
8. Press **NEXT**.
9. Select a default or custom color for the WhiteFlash.
 - **Default** — use the **Load** knob to select a preset color for the WhiteFlash.
 - **Custom** — press **NEXT** and use the **Hue**, **Sat**, and **Lum** knobs to select your own color.

Wipe Transitions

A Wipe is a gradual transition where one video signal is replaced with another according to a wipe pattern. In the example below, a line wipe is being used.



Figure 17: Wipe Transition

For Key transitions, the key is wiped on or off-air with the transition and the background remains untouched. The duration of a wipe transition depends on either the transition rate for the ME, or the rate at which the fader is moved.

To Set Up a Wipe

A wipe transition requires that you select a wipe pattern, set the direction and number/size of wipe pattern, as well as set a background and key transition rate for the auto transition. A fader transition does not use the transition rate.

1. Press **WIPE**.
2. Use the **Time** knob to set the length of the background transition. Enter the length of the background transition in the **ME Rate** field, or the length of a key transition in the **Key X Rate** field.

*Tip: Press **ME RATE** in the Effects Memory area for the ME you want to change the rate for, use the keypad to enter the new rate, and press **Enter**. (Does not apply to CB1 or CB2.)*

*Tip: Press **KEY RATE** in the Effects Memory area repeatedly to select the Keyer you want to set the rate*

*for, use the keypad to enter the new rate, and press **Enter**. (Does not apply to CB1 or CB2.)*

3. Use the **Dirctn** knob to select the direction that the wipe travels.
4. Press the **Dirctn** knob to select whether the wipe runs forward during the first transition and then reverse during the second (**FF**), or if it always goes in the same direction.
5. Press **NEXT**.
6. Use the **Patrn** knob to select the wipe pattern you want to use. You can also select the pattern by pressing the pattern button directly.
7. Use the **X Pos** and **Y Pos** knobs to position the wipe pattern. You can also use the positioner.
8. Press **NEXT**.
9. Use the **Aspect** knob to adjust the aspect ratio of the wipe pattern.

Not all patterns can be adjusted.
10. Use the **Border** and **Soft** knobs to apply a border to the wipe pattern.

Refer to the section [To Apply a Border to a Pattern](#) on page 24 for information on borders.
11. Press **NEXT**. If a border is applied to the wipe, you must press **NEXT** multiple times to get to the next step.
12. Use the **Rot** knob to rotate the pattern. Use the **Rotation** slider to rotate the pattern.

Not all patterns can be rotated.
13. Use the **HMult** knob to multiply the pattern horizontally. Use the **HMultiply** slider to multiply the pattern horizontally.
14. Use the **VMult** knob to multiply the pattern vertically. Use the **VMultiply** slider to multiply the pattern vertically.

To Apply a Border to a Pattern

1. Press **WIPE > NEXT > NEXT**.
2. Use the **Border** knob to adjust the size of the border around the pattern.
3. Use the **Soft** knob to adjust the softness of the pattern border.
4. Press **NEXT**.

5. Select a default or custom color for the border.
 - **Default** — use the **Load** knob to select a preset color for the border. **Default** — click one of the preset colors.
 - **Custom** — press **NEXT** and use the **BHue**, **BSat**, and **BLum** knobs to select your own color. **Custom** — click the arrow to the right of the **Border Color** area and use the **Hue**, **Saturation**, and **Lightness** sliders to select your own color. Click **OK** to apply the color or **Live** to apply it in real-time.

DVE Transitions

A DVE transition is a gradual transition where one video signal is replaced with another according to a 2D DVE pattern.

Keep the following in mind when performing DVE transitions:

- You must include the background when performing a DVE transition on a Chroma Key, Self Key, or Auto-Select Key. If you do not include the background, a dissolve transition is performed.
- Performing a DVE transition on a DVE Key without including the background scales the transition effect to the size of the DVE Key. This transition does not consume an additional DVE resource.
- Performing a DVE transition on a DVE Key with the background included does not scale the transition effect. This transition consumes the second DVE resource.

To Set Up a DVE Transition

A DVE transition requires that you select the DVE pattern and duration for the transition.

1. Press **DVE**. Click **Navigation Menu > Live Assist > MEDVE**.

Tip: You can use the same procedure for a MiniME™.

2. Use the **Time** knob to set the length of the background transition. Enter the length of the background transition in the **ME Rate** field, or the length of a key transition in the **Key X Rate** field.

*Tip: Press **ME RATE** in the Effects Memory area for the ME you want to change the rate for, use the keypad to enter the new rate, and press **Enter**. (Does not apply to CB1 or CB2.)*

*Tip: Press **KEY RATE** in the Effects Memory area repeatedly to select the Keyer you want to set the rate for, use the keypad to enter the new rate, and press **Enter**. (Does not apply to CB1 or CB2.)*

3. Use the **Dirctn** knob to select the direction that the wipe travels.
4. Press the **Dirctn** knob to select whether the wipe runs forward during the first transition and then reverse during the second (**FF**), or if it always goes in the same direction.
5. Press **NEXT**.
6. Use the **Effect** knob to select the DVE pattern you want to use. You can also select most of the patterns by pressing the mnemonic pattern button directly. Click a **DVE Pattern** button to select the DVE wipe pattern you want to use.
 - **PushL** — Push Left
 - **PushR** — Push Right
 - **PushU** — Push Up
 - **PushD** — Push Down
 - **SqzHor** — Squeeze Horizontally
 - **SqzVert** — Squeeze Vertically
 - **SqzCtr** — Squeeze to the Center
 - **PushUL** — Push to Upper-Left
 - **PushUR** — Push to Upper-Right
 - **PushDL** — Push to Lower-Left
 - **PushDR** — Push to Lower-Right
 - **SqzUR** — Squeeze to Upper-Right
 - **SqzUL** — Squeeze to Upper-Left
 - **SqzDR** — Squeeze to Lower-Right
 - **SqzDL** — Squeeze to Lower-Right
 - **CirclL** — Circle Left
 - **CirclR** — Circle Right
 - **FlyTru** — Fly Through
 - **Strtch** — Stretch Horizontally to Black
 - **Tumble** — Tumble Down
 - **1000lb** — Falls and then Bounces
 - **SqzU** — Squeeze Up
 - **SqzD** — Squeeze Down
 - **SqzL** — Squeeze Left
 - **SqzR** — Squeeze Right

MediaWipe Transitions

A MediaWipe allows you to use an animation to cover a transition. When the transition starts, the switcher plays the selected animation over top of the background and keys that are being transitioned. A MediaWipe can be used to cover a cut, dissolve, wipe, or DVE transition.

For a cut MediaWipe, the transition is performed when the cut point is reached. It is important to use a full-

screen image in the animation at the cut point so that the cut is not visible on-air.

Keep the following in mind when performing MediaWipe:

- Although you can select a still image for a media transition, it is not recommended.
- Only Auto Transition should be used for Media transitions. Using the fader to perform the transition manually could result in jumps in the animation.
- The duration of the transition (Time) is set by the length of the animation and the play speed of the animation.
- The audio associated with a MediaWipe is only available on the AES outputs.
- You cannot perform a MediaWipe transition on a MiniME™ or MultiScreen.
- If the Media-Store channel being used for a MediaWipe is set as a MSFS, the transition is switched to a standard dissolve.

To Set Up a MediaWipe

A MediaWipe requires that you select the animation you want to use and then set up how you want to transition performed under the animation. This information is stored with the media item when you press save.

Note: You cannot set up a MediaWipe from a C1 control panel.

1. Press **MEDIA**.

Tip: Press and hold the **MEDIA** button and select the Media-Store channel you want to assign the animation to on the Preset bus. The Media-Store channels must be assigned to source buttons with the bus map to be selectable.

2. Press the **Browse** knob and use the knob to navigate to the file you want to load. Press the knob to make a selection.
3. Press **NEXT**.
4. Use the **Attrib** and **Value** knobs to set wipe parameters.
 - **X-Pos** — position the wipe horizontally.
 - **Y-Pos** — position the wipe vertically.
 - **Shaped** — whether the MediaWipe alpha is shaped (**yes**) or unshaped (**no**).
 - **Media#** — the media id for the media item you want to use for the MediaWipe.
5. Press **Save Func** to save the changes.
6. Press **NEXT**.

7. Press **EditMT**.
8. In the pattern selection area, select the type of transition you want to use under the MediaWipe.
 - **Cut (0)** — Use the **Cut** knob to select the cut point for the transition.
 - **Dissolve (1)** — Use the **Start** knob to select the point where the dissolve starts and the **Rate** knob to select the duration of the transition.
 - **Wipe (2)** — Use the **Start** knob to select the point where the dissolve starts and the **Rate** knob to select the duration of the transition. Press **NEXT** and set up the remaining wipe parameters as normal. Wipe border is not supported.
 - **DVE (3)** — Use the **Start** knob to select the point where the dissolve starts and the **Rate** knob to select the duration of the transition. Press **NEXT** and set up the remaining DVE wipe parameters as normal.

Tip: If you select a negative start point for the transition, the transition will start first and then the animation will play after the start point duration has passed.

Tip: You can use the fader to move through the MediaWipe animation to the point where you want the transition to start and press **Start Trans (5)** and then move the fader to the point where you want the transition to end and press **End Trans (6)**.

9. Use the fader to select a point in the animation that you want to use as a thumbnail for the MediaWipe and press **Thumb Frame (8)**.
10. Press **Save (9)** to save the new setting to the selected media item.

To Set the MediaWipe Layer

The MediaWipe can be set to occur between any of the keys or the background. When you set the layer to a specific key, the MediaWipe animation will cover that key, even if the key is not part of the transition. The animation plays over the key, but the key remains after the animation is finished. Any keys above the MediaWipe layer remain on top of the animation.

1. Press **MEDIA > NEXT > NEXT > NEXT**.

Note: The **Layer** knob may be in a different location, depending on the type of MediaWipe transition is selected.

2. Use the **Layer** knob to select where the MediaWipe will occur.
 - **Auto** — MediaWipe occurs over highest number key in the transition.
 - **Bkgd** — MediaWipe occurs over the background, but under all keys.
 - **Key1** — MediaWipe occurs over the background and key 1, but under remaining keys.
 - **Key2** — MediaWipe occurs over the background and key 2, but under remaining keys.
 - **Key3** — MediaWipe occurs over the background and key 3, but under key 4.
 - **Key4** — MediaWipe occurs over the background and all keys.



Important: If a key is above the MediaWipe layer and included in the MediaWipe transition, it will cut off-air with the transition. This is normally covered by the animation when the layer is above the key.

Transition Limits

The Transition Limit allows you to set the point in a transition where an auto transition stops. When active, the point in the transition where the auto transition will stop is indicated by a flashing segment on the transition progress bar next to the fader handle. The auto transition proceeds to this point and stops. The second auto transition starts from the transition limit point and goes back to where the first transition started.

Tip: If you turn Limit off when the transition has stopped at the transition limit point, the next transition starts from the transition limit point and goes forward to complete the transition, instead of going back to the start.

To Set Up a Transition Limit

A transition limit is set using the fader of the ME that you want to set up the transition limit on. The transition limit is specific to the ME it is set on. The transition limit is specific to the ME it is set on.

1. Set up the transition you want to perform.
2. Press **NEXT** until **Limit** is shown on the menu.

Tip: You can use the same procedure for a MiniME™.

3. Move the fader to the position in the transition where you want to set the transition limit point.

4. Toggle the **Limit** knob (**On**) to set the transition limit point.

The segment on the transition progress bar next to the fader handle flashes, indicating the location of the transition limit point.

The transition limit is set and active for the ME you set it on. You can turn transition limit on and off by toggling the **Limit** knob while the fader is at either the top or bottom limit. If the fader is not on a limit when you toggle the transition limit on, a new transition limit will be set. Double-press the **Limit** knob to reset the transition limit point.

GPI Output Triggers

Each video source can have a GPI output assigned to it. This GPI can be used to trigger an external device, such as a video server, to play the cued clip when the video sources from the video server are taken on-air. This trigger can be set up to occur automatically any time the video source is transitioned on-air, or it can be triggered manually.

An automatic GPI output trigger can be overridden if required.

Note: The Next Button Secondary Function must be set to GPO to be able to trigger a GPI output manually using the NEXT button.

Keep the following in mind when working with GPI output triggers:

- The **RIClip** knob must be set to **On** to trigger a GPI output with a transition.
- The **Roll Clip** must be set to **On** to trigger a GPI output with a transition.
- Edge triggered GPI outputs remain triggered for the configured duration.
- Level triggered GPI outputs toggle between high and low each time they are triggered.

To Manually Trigger a GPI Output

The GPI must already be set up as an output and the Next button functionality must be set to GPO before you can manually trigger it.

1. Press and hold the **NEXT** button.

While holding the **Next** button, the mnemonic buttons light for each GPI output that is currently triggered.

2. Press the mnemonic button for the GPI output you want to trigger. The number of the GPI is shown on the mnemonics of the buttons.

To Override a GPI Output

The RIClip personality option must be set to User for you to override GPI output triggering.

1. Prepare the transition as required, but do not perform the transition.
2. Press the transition type button again to bring up the transition menus.
3. Use the **RIClip** knob to select whether the GPI output is triggered (**On**), or is not triggered (**Off**).

Patterns, Washes, and Mattes

Patterns, Washes, and Mattes are internally generated graphical elements that can be used for key or background fill, key shapes, and transition effects. The switcher has a limited number of pattern and matte generators.

Patterns

Pattern generators are used for wipes.

Related information

[Wipe Transitions](#) on page 24

To Set Up a Pattern

When a pattern generator is assigned to a wipe, the pattern setting are displayed. Selecting the **WIPE** button returns to this menu. When a pattern generator is assigned the pattern settings are part of the setup menu.

1. Use the **Patrn** knob to select the wipe pattern you want to use. You can also select the pattern by pressing the pattern button directly.
2. Use the **X Pos** knob to position the wipe pattern horizontally. You can also use the positioner.
3. Use the **Y Pos** knob to position the wipe pattern vertically. You can also use the positioner.
4. Press **NEXT**.
5. Use the **Aspect** knob to adjust the aspect ratio of the patten. Not all patterns can be adjusted.
6. Use the **Border** knob to apply a border to the wipe.

*Tip: Use the **Soft** and **NEXT > Load** knobs to configure the border.*

7. Press **NEXT**. If a border is applied to the wipe or mask, you must press **NEXT** multiple times to get to the next step.
8. Use the **Rot** knob to adjust the aspect ratio of the patten. Not all patterns can be rotated.
9. Use the **HMult** knob to multiply the pattern horizontally.
10. Use the **VMult** knob to multiply the pattern vertically.

Washes

Washes are applied to matte generators selected on the background or key buses and allow you to apply a two-color effect based on a selected pattern.

Related information

[Mattes](#) on page 29

[Patterns](#) on page 29

To Set Up a Wash

A wash applies colors to a pattern selected for a matte. The first color is preset to the matte color, but both are selectable. Selecting the source button again, or **KEY SEL** button returns to this menu. Refer to the sections on mattes and patterns for information on setting them up. You can load a preset color instead of creating the first custom color.

1. Use the **Hue 1** knob to adjust the hue of the first custom color.
2. Use the **Sat 1** knob to adjust the saturation of the first custom color.
3. Use the **Lum 1** knob to adjust the luminance of the first custom color.
4. Press **NEXT**.
5. Use the **Wash** knob to select **On**.
6. Press **NEXT**.
7. Use the **Size** knob to select the size of the wash pattern.
8. Press **NEXT > NEXT > NEXT > NEXT**.
9. Use the **Hue 2** knob to adjust the hue of the second custom color.
10. Use the **Sat 2** knob to adjust the saturation of the second custom color.
11. Use the **Lum 2** knob to adjust the luminance of the second custom color.

Mattes

Mattes are solid color signals that can be applied to backgrounds and keys, and borders. Color selection is done either by picking a preset color, or by adjusted hue, saturation, and luminance to create a custom color.

Mattes can be applied to the following:

- **Background** — Select the matte generator (**BG**) on a background or key bus. The full region of the background or key is filled with the selected color.
- **Border** — Assign a border to a **WIPE** transition or a key. The wipe border is filled with the selected color.

To Set Up a Matte Color

When a matte generator is assigned to a background or key, the matte setting are displayed. Selecting the source button again, or **KEY SEL** button returns to this menu. When a matte generator is assigned to a key border or wipe border, the matte settings is part of the setup menu, and become active when **Border** is set to greater than 0.

1. Press **NEXT**.
2. Use the **Load** knob to select the preset color you want to use.
3. Press the **Load** knob to load the selected color. If you want to use the preset color, ignore the rest of this procedure.
4. Press **NEXT**.
5. Use the **Hue** knob to adjust the hue of your custom color.
6. Use the **Sat** knob to adjust the saturation of your custom color.
7. Use the **Lum** knob to adjust the luminance of your custom color.

Keying

Keying is the term used to describe when you insert (or electronically cut) portions of one scene into another, or place titles over background images. Keys are made up of two basic components, an alpha, that cuts the hole in the background video, and a fill, that fills the hole with different video.

Keys, like MEs, are layered onto the background video signal from the lowest numbered key to the highest on an ME.

Note: DashBoard Live Assist will not notify you of error messages or if a confirmation is required. For example, if there are no available resources for the DVE Key, or Chroma Key, you are trying to create, the switcher will not create the key and no notification will be shown.

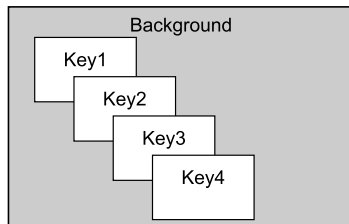


Figure 18: Key Priority

If you are using a MiniME™, key 1 only supports a DVE key type, and key 2 only supports the Self Key, Auto Select, and Chroma Key types. Key priority on a MiniME™ is the same as on an ME.

Understanding the Keying Menu

When you select a key type button (**SELF KEY**, **AUTO SELECT**, **CHR KEY**, or **DVE**), the menu system displays a number of options that allow you to adjust how a the key appears. The options that are available depend on the type of key that is selected.

The switcher supports Self, Auto Select, Chroma, and DVE keys in each ME.

Table 2: Keying Menu Items

Menu Item	Description
Clip	removes lower-saturated colors from the video image
Gain	adjusts the transition between video image, and the parts of the video image that are removed
Transp	adjusts the overall transparency of the key video
Linear	sets the clip, gain, and transparency values for self keys back to the default

Menu Item	Description
Invert	reverses the polarity of the key alpha so that the holes in the background are cut by dark areas of the key alpha instead of bright areas
Mode	overrides the shaped setting for the key
Mask	selects the type of mask that is applied to the key (Masks on page 37)
M-Frce	turns the force mask feature on or off
M-Inv	turns the invert mask feature on or off
Size	adjusts the size of the mask or DVE key
X Pos	selects the horizontal position of the mask or DVE key
Y Pos	selects the vertical position of the mask or DVE key
Aspect	selects the aspect ratio for the DVE key
Border	turns the border feature on and selects the size of the border on the DVE key
Soft	selects the amount of softness that is applied to the DVE key border
Load	selects the color for the border from a pre-set list
BHue	adjusts the hue of the border color
BSat	adjusts the saturation of the border color
BLum	adjusts the luminance of the border color
HCrop	press to toggle between HCrop , Left/R , and L/Rght <ul style="list-style-type: none"> HCrop — adjusts the horizontal cropping of the DVE key Left/R — adjusts the cropping of the left side of the DVE key L/Rght — adjusts the cropping of the right side of the DVE key
VCrop	adjusts the vertical cropping of the DVE key <ul style="list-style-type: none"> Top/B — adjusts the cropping of the top of the DVE key T/Bttm — adjusts the cropping of the bottom of the DVE key
Left/R	press to toggle between Left/R and L/Rght <ul style="list-style-type: none"> Left/R — adjusts the cropping of the left side of the box mask L/Rght — adjusts the cropping of the right side of the box mask
Top/B	press to toggle between Top/B and T/Bttm <ul style="list-style-type: none"> Top/B — adjusts the cropping of the top of the box mask T/Bttm — adjusts the cropping of the bottom of the box mask

Self Keys

A Self Key is a key in which the luminance, or brightness, values of the key source are used as the alpha for the key.

To Set Up a Self Key

A self key is set up by selecting the keyer and video source you want to use, and adjusting the key parameters.

*Tip: You can return the clip and gain values to the default settings by pressing the **Make Linear** knob.*

*Tip: You can return the clip and gain values to the default settings by clicking **Make Linear**.*

1. Select the keyer that you want to set up a Self Key on. Click **Navigation Menu > Live Assist > ME** and select the ME and key that you want to set up.

Tip: You can use the same procedure for a MiniME™.

2. Select the video signal, on the key bus, that you want to use for the key. Click **Key Fill** and select the video signal you want to use for the key.
3. Press **SELF KEY**. Click **Self Key**.
4. Use the **Clip** knob to remove lower-saturated colors from the video image. Use the **Clip** slider to remove lower-saturated colors from the video image.
5. Use the **Gain** knob to adjust the transition between the video image and the parts of the video image that are removed. Use the **Gain** slider to adjust the transition between the video image and the parts of the video image that are removed.
6. Use the **Transp** knob to adjust the transparency of the key from opaque (**0%**) to fully transparent (**100%**). Use the **Transparency** knob to adjust the transparency of the key from opaque (**0**) to fully transparent (**100**).
7. Press **NEXT**.
8. Use the **Invert** knob to reverse the polarity of the key alpha (**On**) so that the holes in the background are cut by dark areas of the key alpha instead of bright areas. Click **Key Invert** to reverse the polarity of the key alpha so that the holes in the background are cut by dark areas of the key alpha instead of bright areas.

9. Use the **Mode** knob to override the shaped setting for the key. Click a **Keyer Mode** button to override the shaped setting for the key.
 - **Normal** — set to a linear keyer for an unshaped source.
 - **AddtiveAdditive** — set to an additive keyer for a shaped source. The **Make Linear** function is disabled in this mode. **Additive** — set to an additive keyer for a shaped source. The **Make Linear** function is disabled in this mode.
 - **Full** — set the alpha to fully opaque (white). The **Clip**, **Gain**, **Make Linear**, and **Key Invert** functions are disabled in this mode.

*Note: The mode is reset to **Normal** when a different source is selected on the key bus, the alpha is changed, or a memory is recalled.*

10. Press **NEXT**.
11. Use the **Mask** knob to apply a mask to the key. Click **Mask** to apply a mask to the key.

Auto Select Keys

An Auto Select key is a key in which two video signals are required to make the key. The alpha is used to cut the hole in the video and the fill is used to fill the hole. These signals often originate from external devices such as character generators, external still stores, or other graphics systems.

To Set Up an Auto Select Key

An auto select key is set up by selecting the keyer and video source you want to use, and adjusting the key parameters. The pairing of the video and alpha video signals is done when configuring video inputs. Refer to the Setup Manual that came with your switcher for information on setting up Auto Keys.

*Tip: You can return the clip and gain values to the default settings by pressing the **Make Linear** knob.*

*Tip: You can return the clip and gain values to the default settings by clicking **Make Linear**.*

1. Select the keyer that you want to set up an Auto Select on.
 - Tip: You can use the same procedure for a MiniME™.*
2. Select the video signal, on the key bus, that you want to use for the key. Click **Key Fill** and select the video signal you want to use for the key.
3. Press **AUTO SELECT**. Click **Auto Select**.
4. Use the **Clip** knob to remove lower-saturated colors from the video image. Use the **Clip** slider

to remove lower-saturated colors from the video image.

5. Use the **Gain** knob to adjust the transition between the video image and the parts of the video image that are removed. Use the **Gain** slider to adjust the transition between the video image and the parts of the video image that are removed.
6. Use the **Transp** knob to adjust the transparency of the key from opaque (**0%**) to fully transparent (**100%**). Use the **Transparency** knob to adjust the transparency of the key from opaque (**0**) to fully transparent (**100**).
7. Press **NEXT**.
8. Use the **Invert** knob to reverse the polarity of the key alpha (**On**) so that the holes in the background are cut by dark areas of the key alpha instead of bright areas. Click **Key Invert** to reverse the polarity of the key alpha so that the holes in the background are cut by dark areas of the key alpha instead of bright areas.
9. Use the **Mode** knob to override the shaped setting for the key. Click a **Keyer Mode** button to override the shaped setting for the key.
 - **Normal** — set to a linear keyer for an unshaped source.
 - **AddtveAdditive** — set to an additive keyer for a shaped source. The **Make Linear** function is disabled in this mode. **Additive** — set to an additive keyer for a shaped source. The **Make Linear** function is disabled in this mode.
 - **Full** — set the alpha to fully opaque (white). The **Clip**, **Gain**, **Make Linear**, and **Key Invert** functions are disabled in this mode.

*Note: The mode is reset to **Normal** when a different source is selected on the key bus or the alpha is changed.*

10. Press **NEXT**.
11. Use the **Mask** knob to apply a mask to the key. Click **Mask** to apply a mask to the key.

The Auto Select key uses the pre-assigned Auto Key association to select the proper video and alpha. If you want to temporarily select a different video source for the alpha, press and hold the **AUTO SELECT** button and select the video source you want to use as the new fill.

UltraChrome 2 Chroma Key

An UltraChrome Chroma Key is a key in which the hole is cut based on a color value, or hue, rather than a

luminance value or alpha signal. The color is removed and replaced with background video from another source. The default color is blue.

UltraChrome 2 can work in two modes, depending on the lighting conditions and subject matter used for the chroma key.

- **HR Wedge Key** — Based on the standard chroma keyer and discriminates between the color vector angle and level of the background color vs the color vectors and levels in the foreground components. This produces very good results under ideal conditions. However, if the scene includes high detail luma content in edge regions, these may not be included in the output.
- **HR Detail Key** — Differs from the standard chroma keyer in that it adds luminance dependency to a three-dimensional spherical color discriminator. This chroma keyer can develop subtle video and alpha shapes and discriminate high detail luma content in edge transition areas. However, this design may have problems with content where background and foreground levels are similar within the video itself.

Tip: UltraChrome 2 also offers the option to combine these two modes to offer good capture of high luma detail in the edge regions as well as compensation for similar foreground and background levels.

The UltraChrome 2 chroma keyer uses an independent chroma key engine to produce the video and alpha components of the key. These internal video streams can be composited in an ME or MiniME™ keyer, or fed out two separate video streams to an external device, such as a video server.

To Select the Chroma Key on a Keyer

The outputs of the chroma key engine must be selected on a key bus to be properly keyed and to adjust the chroma key parameters.

1. Press the **KEY X SEL** button for the keyer that you want to view the chroma key on.
2. Press **AUTO SELECT**.
3. Press the **CKX** source button on the key bus for the chroma key engine you want to use.

Note: When you select the chroma key engine on a bus, the key bus becomes assigned to that chroma key engine so that you can select a source for the chroma key.

To Set Up a Chroma Key

Set up the chroma key with the source you want to use and adjust the parameters. Ensure that the chroma key output has been selected on a keyer so that you can view the output as you adjust the parameters.

1. Select the chroma key engine that you want to use.

Tip: You can either press the user select button assigned to the chroma key, press and hold the **CHR KEY** button and press the corresponding keyer button, or press the chroma key source button on the key bus.

2. Press the source button on the key bus for the video feed you want to apply the chroma key to.

Note: You can only select a physical input, Media-Store, or MediaWipe for a chroma key. You can also select an Aux Bus, but the source selected on the Aux Bus must be valid for the chroma key.

3. Use the **Color** knob to select the color of the background you are using for your chroma key.
4. Press **Init**.

The chroma key engine initializes and attempts to remove the selected background color from the video. Any further adjust is only required if you want to adjust aspects of the key.

5. Press **NEXT**.
6. Use the **Key Type** knob to select the chroma key mode you want to use.

- **Wedge** — Based on the standard chroma keyer and discriminates between the color vector angle and level of the background color vs the color vectors and levels in the foreground components.
- **Detail** — Differs from the standard chroma keyer in that it adds luminance dependency to a three-dimensional spherical color discriminator.
- **Combination** — Combine the two modes to offer good capture of high luma detail in the edge regions as well as compensation for similar foreground and background levels.

Note: All adjustments are always available, even if the are not applied by the selected mode.

7. Press **NEXT**.
8. For Wedge Type, use the **Type** knob to select **Wedge** and the **Cntrl** and **Values** knobs to adjust the parameters.
 - **Gain** — use this setting to set the **Angle Control** to 100 and the **Lift** to 0 and then adjust this setting until the background is fully removed, leaving a reasonable edge to the

key. Too much gain will produce hard and undesirable edges.

Tip: Adjust the **Gain** with the **Bkgd Luma Suppress** to balance between background removal and edge quality.

- **BkLuma** — use this setting to compensate for uneven color or lighting in the shot to ensure the chroma background is fully suppressed.

Tip: Turn on a box mask in the keyer you are using to view the chroma key output to compare the backgrounds. The masked area shows the background source without the key settings applied.

- **Angle** — use this setting to change the color wedge angle (wedge shape) that is used to detect areas of foreground (fill) and background (alpha) based on the chosen color vector. This can help fill in areas of heavy spill without hardening edge detail.
- **Lift** — use this setting to amplify the generated alpha signal to fill in areas of transparency.
- **HiCorr** — use this setting to lift areas of the image might contain high luminance levels at edge boundaries. This could be due to lighting conditions, camera setup, or subject.

9. For Detail Type, use the **Type** knob to select **Detail** and the **Cntrl** and **Values** knobs to adjust the parameters.

- **Clip** — use this setting to clip between the foreground and background. You are looking to achieve complete background removal.

Tip: Clip should be set to the point where the background is just removed. Setting it too high will reduce edge quality.

- **Gain** — use this setting to lift the fill image. You are looking to achieve solid fill content.

Tip: Setting the gain too high may introduce dark boundaries.

- **ShSens** — use this setting to adjust the level of dark image areas, particularly in cast shadow areas.
- **ShDens** — use this setting to adjust the apparent lightness of the dark / shadow areas in conjunction with the **Shadow Sensitivity**.
- **HiSens** — use this setting to fill areas with specular highlights, such as reflective surfaces, that can show through to the background.

10. Use the **Type** knob to select **Global** and the **Cntrl** and **Values** knobs to adjust the parameters.

- **ChrAng** — use this setting to select the fill color that has been detected as color spill. You should not have to adjust this setting.
- **ReSpil** — use the **ReSpil**, **RSCHue**, and **RSCSat** settings to select a color that is near the average color of the background/lighting that needs to be added into those areas of the fill that contain the spill from the chroma set.

11. Use the **Type** knob to select **Misc** and the **Cntrl** and **Values** knobs to adjust the parameters.

- **EdgeSo** — use this setting to filter the edges to eliminate undesirable hard edges and add realism to a scene by simulating depth of field characteristics.
- **BkNorm** — use this setting to offset the detected level of the chroma background and allow for fine tuning.

Tip: If the subject image contains fine detail such as fine hair with a luminance level that is close in value to the chroma set color background level – it may be difficult to provide good separation between background and foreground elements.

DVE Keys

The DVE key allows you to apply digital video effects, such as scale, crop, aspect ratio, position, and border to video image or another key type. When the DVE is applied to another key type, it is said to be flying (Fly Key).

Tip: You can see where DVE channels are allocated from the Status page in DashBoard.

Keep the following in mind when working with a Fly Key:

- The Fly Key feature consumes a single DVE channel for self keys, but two DVE channels for an auto select key.
- The Fly Key feature cannot be applied to a DVE key.
- The Key Invert feature is not available for a Fly Key.

To Set Up a DVE Key

The DVE resources for this key may not be available. Depending on how your switcher is configured, you may be asked to steal the resources from another element, or be prevented from using the resources.

1. Select the keyer that you want to set up a DVE key on. Click **Navigation Menu > Live Assist >**

ME and select the ME and key that you want to set up.

Tip: You can use the same procedure for a MiniME™.

2. Select the video signal, on the key bus, that you want to use for the key. Click **Key Fill** and select the video signal you want to use for the key.
3. Press **DVE**. Click **DVE Key**.
4. Use the **X Pos**, **Y Pos**, and **Size** knobs to position and size the key. You can also use the positioner. Use the **X-Position**, **Y-Position**, and **Size** sliders in the **Positioning** area to position and size the key.
5. Press **NEXT**.
6. Use the **Aspect** knob to adjust the aspect ratio of the key. Use the **Aspect** slider to adjust the aspect ratio of the key.
7. Use the **Border** knob to apply a border to the key. Use the **Size** and **Softness** sliders in the **Border** area to apply a border to the key.

Refer to the section [To Apply a Border to a DVE Key](#) on page 36 for information on borders.

8. Press **NEXT**.
9. Crop the key horizontally as follows:
 - a) Use the **HCrop** knob to crop the key horizontally on both the left and right sides at the same time.
 - b) Press **HCrop** and use the **Left/R** knob to crop the key horizontally on the left side only.
 - c) Press **Left/R** and use the **L/Rgt** knob to crop the key horizontally on the right side only.

10. Use the **Left** and **Right** sliders to crop the left and right sides of the key.

11. Crop the key vertically as follows:
 - a) Use the **VCrop** knob to crop the key vertically on both the top and bottom sides at the same time.
 - b) Press **VCrop** and use the **Top/B** knob to crop the key vertically on the top side only.
 - c) Press **Top/B** and use the **T/Bttm** knob to crop the key vertically on the bottom side only.

12. Use the **Top** and **Bottom** sliders to crop the upper and lower sides of the key.

13. Press **NEXT**.

14. Use the **Mask** knob to apply a mask to the key. Click **Mask** to apply a mask to the key.

To Apply a DVE to a Key (Fly Key)

The DVE resources for this key may not be available. Depending on how your switcher is configured, you may be asked to steal the resources from another element, or be prevented from using the resources.

You should set up your key as you want it before applying the Fly Key.

1. Press and hold **SELF KEY**, **AUTO SELECT**, or **CHR KEY** for the key you want to apply the DVE to and press **DVE**. Click **Navigation Menu > Live Assist > ME** and select the ME and key that you want to set up.

*Tip: Hold the **SELF KEY**, **AUTO SELECT**, or **CHR KEY** button again and press **DVE** to turn off the Fly Key.*

2. Press the **KEY X SEL** button for the key you are setting up. Click **DVE** and click **On**.
3. Use the **X Pos**, **Y Pos**, and **Size** knobs to position and size the key. You can also use the positioner. Use the **X-Position**, **Y-Position**, and **Size** sliders in the **Positioning** area to position and size the key.
4. Press **NEXT**.
5. Use the **Aspect** knob to adjust the aspect ratio of the key. Use the **Aspect** slider to adjust the aspect ratio of the key.
6. Use the **Border** knob to apply a border to the key. Use the **Size** and **Softness** sliders in the **Border** area to apply a border to the key.

Refer to the section [To Apply a Border to a DVE Key](#) on page 36 for information on borders.

7. Press **NEXT**.
8. Crop the key horizontally as follows:
 - a) Use the **HCrop** knob to crop the key horizontally on both the left and right sides at the same time.
 - b) Press **HCrop** and use the **Left/R** knob to crop the key horizontally on the left side only.
 - c) Press **Left/R** and use the **L/Rgt** knob to crop the key horizontally on the right side only.
9. Use the **Left** and **Right** sliders to crop the left and right sides of the key.

10. Crop the key vertically as follows:
 - a) Use the **VCrop** knob to crop the key vertically on both the top and bottom sides at the same time.
 - b) Press **VCrop** and use the **Top/B** knob to crop the key vertically on the top side only.
 - c) Press **Top/B** and use the **T/Bttm** knob to crop the key vertically on the bottom side only.
11. Use the **Left** and **Right** sliders to crop the left and right sides of the key.
12. Crop the key vertically as follows:
 - a) Use the **VCrop** knob to crop the key vertically on both the top and bottom sides at the same time.
 - b) Press **VCrop** and use the **Top/B** knob to crop the key vertically on the top side only.
 - c) Press **Top/B** and use the **T/Bttm** knob to crop the key vertically on the bottom side only.
13. Use the **Top** and **Bottom** sliders to crop the upper and lower sides of the key.
14. Use the **Mask** knob to apply a mask to the key. Click **Mask** to apply a mask to the key.

To Apply a Border to a DVE Key

1. Select the keyer that you want to set up a DVE key border on. Click **Navigation Menu > Live Assist > ME** and select the ME and key that you want to set up.

Tip: You can use the same procedure for a MiniME™.

2. Select the video signal, on the key bus, that you want to use for the key. Click **Key Fill** and select the video signal you want to use for the key.
3. Press **DVE**. Click **DVE**.
4. Use the **Border** knob to turn on the border and adjust the size of the border around the key. Use the **Size** slider in the **Border** area to turn on the border and adjust the size of the border around the key.
5. Use the **Soft** knob to adjust the softness of the border. Use the **Softness** slider to adjust the softness of the border.
6. Press **NEXT**.

7. Select a default or custom color for the border.
 - **Default** — use the **Load** knob to select a preset color for the border. **Default** — click one of the preset colors.
 - **Custom** — press **NEXT** and use the **BHue**, **BSat**, and **BLum** knobs to select your own color. **Custom** — click the arrow to the right of the **Border Color** area and use the **Hue**, **Saturation**, and **Lightness** sliders to select your own color. Click **OK** to apply the color or **Live** to apply it in real-time.

Masks

A Mask is a technique in which a square is combined with the key source to block out unwanted portions of the key source.

To Box Mask a Key

Box masks can be adjusted for size, location, rotation, and multiplication.

1. Select the keyer that you want to set up a mask for. Click **Navigation Menu > Live Assist > ME** and select the ME and key that you want to set up.
2. Press **NEXT**. Depending on the key type and features set up for the key, you must press **NEXT** multiple times to get to the next step. Click **Mask > Pattern**.
3. Use the **Mask** knob to select **Box**. Click **Box**.
4. Use the **M-Frc** knob to force the area inside the mask region to the foreground (**On**). Click **Mask Force** to force the area inside the mask region to the foreground.
Force mask is not available for all key types.
5. Use the **M-Inv** knob to invert the masked area with the unmasked area (**On**). Click **Mask Invert** to invert the masked area with the unmasked area.
The portion of the key that was masked out is now visible, and the portion that was visible is masked.
6. Press **NEXT**.
7. Use the **X Pos** and **Y Pos** knobs to position the mask. You can also use the positioner. Use the **X-Position** and **Y-Position** sliders, or drag the **Position** cross-hair, to position the mask.
8. Use the **Size** knob to adjust the size of the mask region. You can also twist the positioner. Use the **Size** slider to adjust the size of the mask region.
9. Press **NEXT**.

10. Adjust the position of the left and right sides of the box mask as follows:
 - a) Use the **Left/R** knob to adjust the position of the left side of the box mask.
 - b) Press the **Left/R** knob.
 - c) Use the **L/Right** knob to adjust the position of the right side of the box mask.
11. Use the **Left Edge** and **Right Edge** sliders to adjust the position of the left and right sides of the box mask.
12. Adjust the position of the top and bottom sides of the box mask as follows:
 - a) Use the **Top/B** knob to adjust the position of the top side of the box mask.
 - b) Press the **Top/B** knob.
 - c) Use the **T/Bttm** knob to adjust the position of the bottom side of the box mask.
13. Use the **Top Edge** and **Bottom Edge** sliders to adjust the position of the upper and lower sides of the box mask.

Split Keys

A Split key allows you to assign a different alpha source for a key than the fill/alpha associations that are set up during configuration, or to use a separate alpha source for a Self key.

A split key can be applied to an **AUTO SELECT**, or **SELF KEY**.

To Set Up a Split Key

A split key works on an **Auto Select** or **Self Key** that has been set up and you want to apply a different alpha to.

1. Set up your key with the video source you want to use.
2. Press and hold the **Auto Select** or **Self Key**, depending on the key type you are splitting. Click **Navigation Menu > Live Assist** and select the key you want split.
3. Press the source button on the key bus for the alpha source you want to use.

*Tip: If the new alpha source is not assigned to a source button, press any other button on the key bus and use the **Alpha** knob to select a different alpha source.*

-
4. Click the **Key Fill** or **Key Alpha** button and select the new source for the key.
 - **Key Fill** — select a different source for the key. This will change the alpha selection as well.
 - **Key Alpha** — select a different alpha for the key. Selecting the different alpha creates the split key.

Key Copy

You can copy the entire contents of a keyer to another keyer. The entire contents of the destination keyer are replaced with the contents of the source keyer.

When you copy a key, the switcher tries to assign resources to the destination key to match the source key. If these resources are not available, the switcher steals resources in the following order:

1. From off-air keys that are not the source key.
2. From the source key, if it is not on-air.
3. From on-air keys that are not the source key.
4. From the source key, even if it is on-air.

To Copy a Key

This procedure copies the contents of Key 1 to Key 3 as an example. Use the same procedure for any key combination.

1. Press and hold the **KEY 3 SEL** button.

This is the destination keyer that you want to copy to.
2. Press the **KEY 1 SEL** button.

This is the source keyer that you want to copy from.

Key Swap

You can swap the entire contents of any two keyers. The video source, position, and key type are all swapped between keyers. This allows you to change the apparent key priority, or layering, of the keys in the video output. For example, key 3 appears over key 2. If you perform a swap between key 3 and key 2, it appears as if key 2 is now over key 3.

Keep the following in mind when performing a key swap:

- Key swap does not change the on-air status of a keyer.
- A key swap can be recorded as part of a custom control.

To Perform a Key Swap

This procedure swaps the contents of Key 2 and Key 3 as an example. Use the same procedure for any key combination.

1. Press and hold the **KEY 2 SEL** button.
2. Press the **KEY 3** button in the next transition area.

Memory Functions

A memory register is a snapshot of the current state of the switcher that can include the ME, MiniME™, or chroma keys. Up to 100 memory registers per ME, MiniME™, or chroma key can be stored and recalled on the switcher. Each of these memory registers can store as little as the information of the ME, or as much as the current state of the entire switcher, including all MiniME™, chroma keys, Aux Buses, and DVE settings.

Memory Access Mode

Switcher memories can be accessed either through **Direct Access** or **Bank** mode.

- **Direct Access** — enter the bank and memory number to store or recall a memory
- **Bank** — enter the memory number to store or recall a memory (the bank is locked)

To Set the Memory Access Mode

The memory access mode applies to both memory storing and recalling.

1. Press **STORE**.
2. Use the **Mode** knob to select the memory access mode you want to use.

Storing Memories

When you store a memory, you are storing the complete state of that panel row. This includes the current state of all the areas on the ME, including keyer settings, transition rates, wipe selections, and source selections. In addition to the current state of the panel, the current settings for the various keyers, such as chroma key settings, and clip and gain settings, are also stored.

*Tip: Double-press the **STORE** button to lock the memory system in store mode. The menu system remains in store mode until you press **RECALL**.*

To Store a Memory

Note: This procedure only applies to the CB1 and CB2.

To store a memory, you must select which ME, MiniME™, or chroma key to store the memory for, and then use the mnemonic buttons to select the bank and register to store the memory in.

1. Press and hold **STORE** and select the source buttons on the key bus to select where you want to store the memory for.
 - **1** — ME 1
 - **4** — MiniME™ 1
 - **5** — MiniME™ 2
 - **6** — chroma key 1
 - **7** — chroma key 2
2. Use the numbers on the mnemonic buttons to select the bank and register you want to store the memory to.

Tip: The button will be lit if that memory register already has a memory stored in it.

The memory has been stored to the selected memory register.

Related information

[Memory Access Mode](#) on page 39

To Store a Memory on the Effects Memory Area

Note: This procedure does not apply to the CB1 and CB2.

1. Press **Store** in the Effects Memory area for the ME you want to store the memory to.
2. Select the recall mode that you want to store with the memory. Toggle the button on (lit) to have it stored with the memory.
 - **PGM** — selects the PGM recall mode
 - **MEM AI** — selects the Memory AI recall mode
 - **EFF DISS** — selects the Effects Dissolve recall mode
3. Press **BANK**.
4. Press the number for the bank you want to select.
5. Press the number for the memory register you want to select.

Tip: The button will be lit if that memory register already has a memory stored in it.

The memory is stored in the selected location.

To Store a Memory on the Global Memory Area

Note: This procedure does not apply to the CB1 and CB2.

1. Press **STORE** next to the display.
2. Select the ME or MiniME™s that you want to store the memory for.

- Use the numbers on the mnemonic buttons to select the bank and register you want to store the memory to.

Tip: The button will be lit if that memory register already has a memory stored in it.

The memory is stored in the selected location.

Recalling Memories

When you recall a memory, the existing configuration of that ME is replaced with the settings stored in the memory.

Keep the following in mind when recalling memories:

- How a memory is recalled depends on the how the Memory Attributes are set.
- Recalling a memory that includes a new Media-Store image to be loaded from a USB drive may result in the currently loaded image to be displayed for a few frames while the new image is loaded.
- Recalling a memory that includes a source assigned to a camera also recalls the shot stored in the memory for that camera if the **CamRcl** memory attribute is set to **Recall**. There is no delay in the memory recall so camera movement may be visible while the shot is recalled.
- You can exit without recalling a memory register by pressing any button other than a Wipe Pattern, dedicated key transition, CUT, AUTO TRANS, or source button.
- You can override the video source stored in a memory by pressing and holding a source button and recalling the memory (Bus Hold). The held source button overrides the source that is recalled with the memory for that bus. The memory is not affected by a Bus Hold and will recall properly without the Bus Hold.
- Enabling Memory AI mode changes the way key elements are recalled. If a key is currently on-air, the element for that key is recalled in the next available off-air key. If there is no available off-air keys, the element is not recalled. All resource sharing is set to FLOAT mode so that key elements may be recalled to other keys than originally stored.

Related information

[Memory Attributes](#) on page 41

To Recall a Memory

Note: This procedure only applies to the CB1 and CB2.

To recall a memory, you must select which ME, MiniME™, or chroma key to recall the memory for, and

then use the mnemonic buttons to select the bank and register to recall the memory from.

- Press and hold **RECALL** and select the source buttons on the key bus to select what you want to recall the memory for.
 - 1** — ME 1
 - 4** — MiniME™ 1
 - 5** — MiniME™ 2
 - 6** — chroma key 1
 - 7** — chroma key 2
- Use the numbers on the mnemonic buttons to select the bank and register you want to recall the memory from.

*Tip: Press the memory number button again to undo the last recall. This can be turned off from the **Personality** menu.*

Related information

[Memory Access Mode](#) on page 39

To Recall a Memory on the Effects Memory Area

Note: This procedure does not apply to the CB1 and CB2.

- Press **Recall** in the Effects Memory area for the ME you want to recall the memory to.
- Select the recall mode that you want use with the memory. Toggle the button on (lit) to select the recall mode, or toggle none of them on to have the memory recalled as it was stored.
 - PGM** — selects the PGM recall mode
 - MEM AI** — selects the Memory AI recall mode
 - EFF DISS** — selects the Effects Dissolve recall mode
- Press **BANK**.
- Press the number for the bank you want to select.
- Press the number for the memory register you want to select.

*Tip: Press the memory number button again to undo the last recall. This can be turned off from the **Personality** menu.*

To Recall a Memory on the Global Memory Area

Note: This procedure does not apply to the CB1 and CB2.

To recall a memory, you must select which ME to recall the memory for, and then use the pattern buttons

to select the bank and register to recall the memory from.

1. Press **RECALL** next to the display.
2. Select the ME or MiniME™'s that you want to recall the memory for.
3. Use the numbers on the mnemonic buttons to select the bank and register you want to recall the memory from.

Tip: Press the memory number button again to undo the last recall. This can be turned off from the **Personality** menu.

Related information

[Memory Access Mode](#) on page 39

Memory Recall Mode

The Memory Recall mode sets how a memory is recalled. This includes whether a memory is recalled on-air, or only on the program bus, or if effects such as Effects Dissolve or DVE Dissolve are used.

To Set Up the Recall Mode Memory Attribute

1. Press **RECALL > NEXT**.
2. Use the **Attrib** knob to select **Recall Mode**.
3. Use the **Value** knob to select the memory recall mode you want to use.
 - **Memory** — the memory recall mode (**PGM**, **MemAI**, or **EffDis**) stored with the memory is used
 - **PGM** — all elements are recalled as stored (default)
 - **MemAI** — current on-air elements are unchanged and the transition area is configured to take the on-air elements of the memory on-air with the next transition
 - **EffDis** — on-air elements listed below are transitioned to the elements stored in the memory
 - Matte colors (background, wash or borders)
 - Keyer settings like clip, gain, transparency
 - Mask position and size
 - Chroma key settings, except the background color
 - DVE settings like size, position, aspect, border, softness, cropping
 - Media-Store x/y position
 - Transition Progress

To Set the Effects Duration

Effects duration applies to Effects Dissolves, and sets the length of time that the switcher will use to transition from the on-air scene to the scene stored in the memory.

Tip: Press **EFF DISS** in the Effects Memory area to turn Effects Dissolve on (lit) or off (unlit) for that ME. Not available on the CB1 and CB2.

1. Press **RECALL > NEXT**.

Tip: If you want to store the effects dissolve rate in the memory, press **STORE > NEXT**.

2. Use the **Attrib** knob to select **EffDur**.
3. Use the **Value** knob to select duration you want to use to transition from the current on-air scene to the one stored in the memory. Use the **Effects Duration** slider to set a duration in frames, or click **Effects Duration From Memory** (on) to use the duration stored in the memory.
 - **Memory** — the duration stored in the memory is used
 - **1-999fr** — sets a specific duration in frames

Tip: Press **EFF RATE** in the Effects Memory area for the ME you want to change the rate for, use the keypad to enter the new rate, and press **Enter**. A value of 0 selects the duration stored in the memory. Not available on the CB1 and CB2.

Memory Attributes

Memory Attributes allow you to specify what elements are recalled with a memory, as well as adding effects to memory recalls. These elements include the background/preset buses, keyer bus, Aux bus, and Media-Store selections, as well as keyer on-air status, and transition selections.

In addition to setting which sources to recall with the memory, effects such as performing an auto transition after the memory recall or running a custom control after the memory recall, can also be included.

Memory attributes can be set both when the memory is stored, and when it is recalled. This allows you to store a set of attributes with a memory and then recall it as stored, or override the attributes stored in the memory and apply different ones when the memory is recalled. A memory attribute does not need to be stored in the memory to be recalled.

Tip: It is recommended that if you are new to working with memories, use the memory store attributes to set how you want a memory to be recalled and set the recall attributes to be **Memory**.

To Set the Program Bus Source Attribute

1. Press **MENU > RECALL** (or **ME 1 RECALL**) > **NEXT**.
2. Use the **Attrib** knob to select **PGMBus**.
3. Use the **ME** knob to select the ME, MiniME™, or chroma key that you want to set the attribute for.
4. Use the **Value** knob to select how the sources selected on the program bus are recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — sources are not recalled on the program bus
 - **Recall** — sources are recalled on the program bus (default)

To Set the Preset Bus Source Attribute

1. Press **MENU > RECALL** (or **ME 1 RECALL**) > **NEXT**.
2. Use the **Attrib** knob to select **PSTBus**.
3. Use the **ME** knob to select the ME, MiniME™, or chroma key that you want to set the attribute for.
4. Use the **Value** knob to select how the sources selected on the preset bus are recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — sources are not recalled on the preset bus
 - **Recall** — sources are recalled on the preset bus (default)

To Set the Transition Type Attribute

1. Press **MENU > RECALL** (or **ME 1 RECALL**) > **NEXT**.
2. Use the **Attrib** knob to select **Trans**.
3. Use the **ME** knob to select the ME, MiniME™, or chroma key that you want to set the attribute for.
4. Use the **Value** knob to select how the next transition type and parameters are recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — transition selections are not recalled
 - **Recall** — transition selections are recalled (default)

To Set the Next Transition Attribute

1. Press **MENU > RECALL** (or **ME 1 RECALL**) > **NEXT**.
2. Use the **Attrib** knob to select **NextTr**.

3. Use the **ME** knob to select the ME, MiniME™, or chroma key that you want to set the attribute for.
4. Use the **Value** knob to select how the next transition area is recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — next transition area settings are not recalled
 - **Recall** — next transition area settings are recalled (default)

To Set the Run Auto Trans Attribute

1. Press **MENU > RECALL** (or **ME 1 RECALL**) > **NEXT**.
2. Use the **Attrib** knob to select **RnAuto**.
3. Use the **ME** knob to select the ME, MiniME™, or chroma key that you want to set the attribute for.
4. Use the **Value** knob to select whether a transition is performed after the memory is recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRun** — a transition is not performed after the memory is recalled (default)
 - **Run** — a transition is performed after the memory is recalled

To Set the Key Bus Sources Attribute

1. Press **MENU > RECALL** (or **ME 1 RECALL**) > **NEXT**.
2. Use the **Attrib** knob to select **KeyBus**.
3. Use the **Key** knob to select the keyer you want to set the attribute for.
4. Use the **Value** knob to select whether sources selected on the selected key bus are recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — sources are not recalled on the key bus
 - **Recall** — sources are recalled on the key bus (default)

To Set the Key On-Air Attribute

1. Press **MENU > RECALL** (or **ME 1 RECALL**) > **NEXT**.
2. Use the **Attrib** knob to select **KActiv**.
3. Use the **Key** knob to select the keyer you want to set the attribute for.

4. Use the **Value** knob to select whether the selected key is recalled on-air (active) or not.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — key is not recalled on-air
 - **Recall** — key is recalled on-air (default)

To Set the Key Type Attribute

1. Press **MENU > RECALL (or ME 1 RECALL) > NEXT**.
2. Use the **Attrib** knob to select **KType**.
3. Use the **Key** knob to select the keyer you want to set the attribute for.
4. Use the **Value** knob to select whether the key type is recalled for the selected key.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — key type is not recalled
 - **Recall** — key type is recalled (default)

To Set the Key Mask Attribute

1. Press **MENU > RECALL (or ME 1 RECALL) > NEXT**.
2. Use the **Attrib** knob to select **KMask**.
3. Use the **Key** knob to select the keyer you want to set the attribute for.
4. Use the **Value** knob to select whether mask settings for the selected key are recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — key mask settings are not recalled
 - **Recall** — key mask settings are recalled (default)

To Set the Media-Store Attribute

1. Press **MENU > RECALL (or ME 1 RECALL) > NEXT**.
2. Use the **Attrib** knob to select **Media**.
3. Use the **Media** knob to select the Media-Store channel you want to set the attribute for.

4. Use the **Value** knob to select whether Media-Store image and settings for the selected channel are recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — Media-Store image and settings are not recalled (default)
 - **Recall** — Media-Store image and settings are recalled

To Set the Aux Bus Attribute

1. Press **MENU > RECALL (or ME 1 RECALL) > NEXT**.
2. Use the **Attrib** knob to select **Aux**.
3. Use the **Aux** knob to select the aux bus you want to set the attribute for.
4. Use the **Value** knob to select how the sources selected on the aux bus are recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — sources are not recalled on the aux bus (default)
 - **Recall** — sources are recalled on the aux bus

To Set the Camera Shot Attribute

1. Press **MENU > RECALL (or ME 1 RECALL) > NEXT**.
2. Use the **Attrib** knob to select **CamRcl**.
3. Use the **Value** knob to select whether camera shots are recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — camera shots are not recalled
 - **Recall** — camera shots are recalled (default)

To Set the Chroma Key Override Attribute

Override the bus inclusion for a chroma key so that chroma key settings can be recalled from the keypad.

1. Press **MENU > RECALL (or ME 1 RECALL) > NEXT**.
2. Use the **Attrib** knob to select **CK**.
3. Use the **Chroma** knob to select the chroma key that you want to override the bus inclusion for.

-
4. Use the **Value** knob to select whether the chroma key bus inclusion setting is overridden.
 - **Memory** — settings come from the memory being recalled
 - **NoRcl** — chroma key is not recalled
 - **Recall** — chroma key is recalled (default)

To Set the Roll GPO Attribute

1. Press **MENU > RECALL** (or **ME 1 RECALL**) > **NEXT**.
2. Use the **Attrib** knob to select **RIIGPO**.
3. Use the **Value** knob to select whether GPI outputs attached to sources are triggered when recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRoll** — GPI outputs are not triggered
 - **Roll** — GPI outputs are triggered (default)

To Set the Roll VTR Attribute

1. Press **MENU > RECALL** (or **ME 1 RECALL**) > **NEXT**.
2. Use the **Attrib** knob to select **RIIVTR**.
3. Use the **Value** knob to select whether a play command is triggered when a source that is assigned to a video server is recalled.
 - **Memory** — settings come from the memory being recalled
 - **NoRoll** — play command is not triggered
 - **Roll** — play command is triggered (default)

Clear Memories

You can clear all the memory registers on the switcher so that they are all empty. This deletes all the contents of the memories.

You cannot clear individual memory registers.

To Clear the Memory Registers

1. Press **MENU > Reset > NEXT > NEXT**.
2. Press the **Clear Mem** knob to clear the memory registers.

Switcher Sets

The switcher stores configuration and operation data in a number of registers that contain the individual entries for items such as memories or personality settings. These registers can be stored as a single archive file, or as a register set that contains all the individual register of that type; all memories for example. These files are stored into Sets on USB drive. Different Sets can be created for different shows or applications, allowing you to quickly locate and recall the switcher configurations.

The switcher stores information in the following registers:

- **Memory** — contains all the memories for ME, MiniME™, and chroma keys.
- **Custom Control** — contains all the custom control banks and macros.
- **Personality** — contains all the user interface settings, such as transition rates, that are stored under the **PERS** menu. Some personality settings are specific to the control panel and can be stored independently if you are working with a MultiPanel system.
- **Installation** — contains all the external device setup, and software settings for the switcher.

To Store a Set

Switcher Sets can only be stored to a USB drive. The USB drive must be present before you try to store the Set. A total of 10 Sets of switcher setup information can be stored onto the same USB drive.

1. Insert a USB drive into the USB Port on the switcher. You must wait 5 seconds for the switcher to recognise the USB drive.
2. Press **MENU > SAVE**.
3. Use the **All** knob to select the set (**0-9**) you want to store the switcher registers to.
4. Press the knob to select the registers you want to store to the selected set. If an (*) is shown on the

menu, that register already exist in the set and will be overwritten.

- **All** — store all registers to the set.
- **Mems** — store only the memory registers to the set.
- **Cust** — store only the custom control registers to the set.
- **Inst** — store only the installation registers to the set.
- **PersX** — store only the personality registers to the set. Use the **Pers** knob to select whether to include the personality setting for all panels (**PersA**) or only the current panel (**PersM/1/2**).

5. Press **Confirm**.

To Load a Set

Switcher Sets can only be loaded from a USB drive. The USB drive must be present before you try to load the settings.

1. Insert your USB drive into the USB Port on the switcher. You must wait 5 seconds for the switcher to recognise the USB drive.
2. Press **MENU > LOAD**.
3. Use the **All** knob to select the set (**0-9**) you want to load the switcher registers from.
4. Press the selected set. Only registers with an (*) shown on the menu exist in the set.
 - **All** — recall all registers from the set.
 - **Mems** — recall only the memory registers from the set.
 - **Cust** — recall only the custom control registers from the set.
 - **Inst** — recall only the installation registers from the set.
 - **Pers** — recall only the personality registers from the set. Use the **Pers** knob to select whether to include the personality setting for all panels (**PersA**) or only a specific panel (**PersM/1/2**).
5. Press **Confirm**.

Media-Store

Media-Store allows you to load stills, animations, or audio files from the USB drive and make them available across all buses on the switcher.

Keep the following in mind when working with the Media-Store:

- A still, animation, or audio can be loaded either by browsing the file system, or by entering the still number using the pattern buttons.
- You can clear a Media-Store channel by loading media number 000.
- If you are loading an Auto Key into a Media-Store channel, you must have another Media-Store channel associated with the current one to load the alpha into.
- An FTP connection using RossLinq can be created from an external device directly to a Media-Store channel on the switcher.

Working With Media-Store Animations

Media-Store animations are used for things animated backgrounds, branding "bugs", or media transitions. You can set up an animation to loop, play automatically when take on-air, play in reverse, or even play at different speeds.

You can play an animation manually by selecting the source button for the Media-Store channel with the animation you want to play, and pressing **Run**. The knob changed to **Stop** as the animation is playing.

Keep the following in mind when working with Media-Store animations:

- When you load an animation to an off-air Media-Store channel, or the animation goes off-air with a transition, the preview shows the cut point (**CutFr**) for that animation, and not the first frame of the video.
- You can manually cycle through frames by turning the **Run** knob while the animation is stopped.
- Double-pressing the **Run** knob stops playback and re-cues the animation to the first frame.
- You can shuttle forwards and backwards through the animation by turning the positioner clockwise or anti-clockwise when the animation is stopped. Shuttle speed is increased and decreased by turning the positioner more or less in each direction.
- You can run or stop an animation by pressing the button on the top of the positioner.

Related tasks

To Set Media-Store File Attributes on page 49

Working With Media-Store Audio

Audio can be added to the playout of a Media-Store channel either by loading the file directly, or by naming the audio file the same as the animation or still you want it to play out with. When you load the still or animation, the switcher will automatically load the audio file of the same name.

Keep the following in mind when working with Media-Store audio:

- In Carbonite Media-Store audio is only available on the MultiViewer outputs. The source of the audio is set by the ancillary source that is selected for the MultiViewer.
- Media-Store audio is only available on the AES output assigned to the Media-Store or MediaWipe channel.
- In Carbonite Black Media-Store audio is only available on the AES output assigned to the Media-Store or MediaWipe channel.
- Audio files must be 20-bit or 24-bit wav files at a 48kHz sample rate.
- Audio files must be in the same folder and have the same name as the still or animation they are to be associated with.
- An audio file does not need to be of the same length as the animation it is associated with.
- A still with audio or audio only have the Auto Play and Looping attributes. These apply to the audio playout.
- The looping time of an animation with audio is the length of the animation.
- In Carbonite Media-Store audio is embedded in the ancillary data of the output video stream. You must have ancillary data set to pass to include the audio in the output.
- A Media-Store channel can be loaded with Audio only.

Media-Store Audio Output

The audio output from the Media-Store is only available on the AES outputs of the Carbonite Black frame.

Only Media-Store channels 1 and 2, and the MediaWipe channel can be assigned to an AES output. Embedded audio is not available on the AES outputs.

To Assign Media-Store Audio to an AES Output

1. Press **MENU** > **System** > **NEXT** > **NEXT** > **NEXT** > **Output Config** > **NEXT**. Click **Navigation Menu** > **Configuration** > **Outputs**

*Tip: Some outputs can have color correction applied to them. You will have to press **NEXT** again to get to **AESOut**.*

2. Use the **AESOut** knob to select the AES output that audio will be available on.
3. Use the **Source** knob to select the audio source for the selected AES output. Click the **Source** button for the AES output you want to assign an audio source to and select the Media-Store or MediaWipe you want to assign to it.

*Note: When one of the AES outputs is set to MediaWipe (**ME1MW**) the other AES output is fixed to **<none>**.*

- **none** — no audio source is assigned to the AES output.
- **MX** — the audio from Media-Store *X* is assigned to the AES output.
- **MEXMW** — the audio from the MediaWipe on ME *X* is assigned to the AES output.

Loading Stills or Animations

Stills or animations can be loaded into Media-Store channels either from USB or the internal cache using the media number, or by browsing to the file.

Note: The internal cache is used for sample images only and cannot be used to store user stills or animations.

Media numbers are 4-digit numbers that are assigned to stills or animations and allow you to load stills or animations directly using the pattern buttons. Each media number is made up of three sections, the Place (0-1), the Bank (00-99), and the Item Number (0-9). The Place is either 0 for internal stills, or 1 for external.

Media-Store File Specifications

Media-Store images and animations can be TGA, PNG, or JPG file formats. For animations, the files must be numbered to indicate the order they go in, and the name and the number must be separated with an underscore. For audio, 20-bit or 24-bit wav files of the same name as the still or animation are used to associate audio with a still or animation.

- Anim_001.tga
- Anim_002.tga
- Anim_003.tga

- ...
- Anim_100.tga

Together, these files are treated as a single animation named Anim that is 100 frames long.

*Note: An animation must start with **_001** as the end of the name of the first frame.*

Files names cannot contain symbols such as **! @ # & * () / , ? ' "** and cannot start with an underscore (**_**).

To Load a Still or Animation

Stills or animations can be loaded from the USB drive, or from the internal cache. Only the default images that came with your switcher are available on the internal cache.

1. If you are loading a file from USB, insert your USB drive into the USB Port on the switcher. You must wait 5 seconds for the switcher to recognise the USB drive.

If the files on your USB are new, it takes about 2 seconds per file for the switcher to generate the thumbnail for the MediaManager. Once all the thumbnails are generated, they are displayed in the MediaManager window.

2. Press the source button for the Media-Store channel that you want to load a still into. If the file has an alpha, the paired channel will load the alpha as well.
3. Press the **Browse** knob.
4. Use the left knob to navigate to the file you want to load. Press the knob to make a selection.
 - **<..>** — up one
 - **USB(1)** — the USB drive
 - **Internal(0)** — the internal cache
 - **<folder>** — a sub-folder of the name "folder"
 - **image** — a still of the name "image"
 - **image.tga .wav** — a still with an associated audio file (not in the database)
 - **image [V][A]** — a still with an associated audio file (in the database)
 - **animation [V10]** — a 10 frame animation of the name "animation" (in the database)
 - **animation.tga[10] .wav** — a 10 frame animation with an associated audio file (not in the database)
 - **animation [V10][A]** — a 10 frame animation with an associated audio file (in the database)

*Tip: If you want to associate an audio file with the still or animation but the **.wav** does not appear in the name, ensure that the audio file is named the same as the still or animation and in the same folder.*

A still or animation can be loaded using the Media Number for the still and the pattern buttons.

Related information

[Working With Media-Store Animations](#) on page 46

To Load Stills Using Media Numbers

How you load a still using the media number depends on whether the Place or Media are locked. If the Place is locked, you only have to enter the 3-digit Media number. If the Place and Media are locked, you only have to enter the last digit of the Media number.

Note: Loading 000 clears the current Media-Store channel.

1. Insert your USB drive into the USB Port on the switcher. You must wait 5 seconds for the switcher to recognise the USB drive. If you are loading a file from the internal cache, you do not need the USB drive.
2. Press the source button for the Media-Store channel that you want to load a still into. If the file has an alpha, the paired channel will load the alpha as well.
3. Using the pattern buttons, enter the media number for the still you want to load.
For example, press **1051** to select the USB(1) drive, Media 051.
4. Press **Select**.

Related tasks

[To Lock a Media Number Place and Bank](#) on page 49

Media-Store Capture

Still images can be captured from any input BNC, as well as the program, preview, and clean feed from any ME.

To Capture a Still

1. Insert your USB drive into the USB Port on the switcher. You must wait 5 seconds for the switcher to recognise the USB drive.
2. Press the source button for the Media-Store channel that you want to capture a still into.
3. Press the **Capt** knob.
4. Press the **P/B** or **E/E** knob to select the mode you want the Media-Store in.
 - **E/E** — electronic-to-electronic, or record, mode allows you to record a still
 - **P/B** — playback mode allows you to review your still

5. Use the **P/B** or **E/E** knob to select the video source that you want to perform the capture of.
6. Press **NEXT**.
7. Use the **Alpha** knob to select whether you want to capture the alpha signal (**Yes**) or not (**No**). You must have an input BNC selected as the capture source to capture the alpha.
8. Press **NEXT**.
9. Use the **Capt** knob to select a number for the still you want to capture.
10. Press the **Capt** knob to perform the capture. The new media item is stored and the media number is increased by one.

Media-Store Attributes

Attributes are applied to the image or animation directly, regardless of the channels that the image or animation are loaded in. If you adjust the attributes of the still in one channel, these settings are applied to that image or animation in all other channels that the same image or animation is loaded into.

Understanding the Attributes Menu

When you select a still or animation, the menu system displays a number of attributes that allow you to adjust how a the image or animation appears. The options that are available depend on the type of Media-Store image or animation that is selected.

Table 3: Attributes Menu Items

Menu Item	Description
X Pos	selects the horizontal position of the image or animation
Y Pos	selects the vertical position of the image or animation
Shaped	selects shaped or unshaped for the alpha of the image or animation
Looping	selects whether the animation loops automatically or not
Reverse	selects whether the animation plays in reverse or not
AutoPly	selects whether the animation starts playing automatically when taken on-air or not
Speed	selects the speed that an animation plays at (0.1-10)
MediaX	selects the media number that you want to use to recall the still or animation
CutFr	selects the point, in frames, from the start of the animation that the background transition occurs

Menu Item	Description
GPO	selects the GPI output that you want to trigger by a media transition
GPOFr	selects the time, in frames, from the start of the media transition that the GPI output is triggered
Mute	selects whether the associated audio is turned on or off during playback

To Set Media-Store File Attributes

The attributes that you can set depend on whether the file you are setting them for is a still or animation.

1. Insert your USB drive into the USB Port on the switcher. You must wait 5 seconds for the switcher to recognise the USB drive. If you are loading a file from the internal cache, you do not need the USB drive.
2. Press the source button for the Media-Store channel that you want to load a still into. If the file has an alpha, the paired channel will load the alpha as well.
3. Press **NEXT**.

4. Use the **Attrib** knob to select the attribute you want to set, and the **Value** knob to select the value you want to assign to the attribute.
 - **X Pos** — selects the horizontal position of the image or animation
 - **Y Pos** — selects the vertical position of the image or animation
 - **Shaped** — selects shaped or unshaped for the alpha of the image or animation
 - **Looping** — selects whether the animation loops automatically or not
 - **Reverse** — selects whether the animation plays in reverse or not
 - **AutoPly** — selects whether the animation starts playing automatically when taken on-air or not
 - **Speed** — selects the speed that an animation plays at (0.1-10)
 - **MediaX** — selects the media number that you want to use to recall the still or animation
 - **CutFr** — selects the point, in frames, from the start of the animation that the background transition occurs
 - **GPO** — selects the GPI output that you want to trigger by a media transition
 - **GPOFr** — selects the time, in frames, from the start of the media transition that the GPI output is triggered
 - **Mute** — selects whether the associated audio is turned on or off during playback
5. Use the **Func** knob to select how you want to save the attributes.
 - **Save** — saves the adjustments for the selected **Attrib** value only
 - **SavAll** — saves the adjustments for all **Attrib** values
 - **Revert** — undoes the adjustments for the selected **Attrib** value only
 - **RevAll** — undoes the adjustments for all **Attrib** values
6. Press the **Func** knob to make the selection.

To Lock a Media Number Place and Bank

Locking the Media Number Place and Bank means that you do not have to enter them when loading a still. Lock settings are specific to the channel they are set on.

1. Press the source button for the Media-Store channel that you want to set the Place and Bank lock settings for.
2. Press the **Browse** knob.

3. Press **NEXT**.
4. Use the **Place** knob to select USB or Internal.
5. Press the **Place** knob to toggle the lock on or off. Locked is shown with [] around the name.
6. Use the **Media** knob to select the bank you want to lock to.
7. Press the **Media** knob to toggle the lock on or off. Locked is shown with [] around the name.

Related tasks

To Load Stills Using Media Numbers on page 48

MediaManager

The MediaManager provides a graphical interface to the operation of the Media-Store from. The layout of the MediaManager window is stored in Perspectives. The last loaded Perspective is used when the browser is refreshed or opened.

From the Menu Bar at the top of the window you can manage Perspectives.

Tip: You can either launch the MediaManager directly using the switcher IP address, or you can access it using the MediaManager node in DashBoard. If you are logging into MediaManager from DashBoard, you must have Microsoft® Internet Explorer® 10, or higher, installed.

Using MediaManager

To use the MediaManager, you must have a computer connected to the same subnet as the switcher, the IP address of your switcher, and the Google Chrome™ browser installed on your computer. In the web browser, navigate to the IP address of the switcher, the MediaManager is displayed.

When you are communicating with the switcher, a moving status indicator is shown in the lower right corner of the browser window. If you lose communications with the switcher, refresh the browser window to reconnect. Refreshing the browser will reset your Perspectives.

Keep the following in mind when logging in and using the MediaManager:

- Ross Video recommends using Google Chrome™ v14.0 running on Microsoft® Windows® 7 or Macintosh® OS X® Lion to connect to the MediaManager.
- Your browser must have Oracle® JavaScript® and cookies enabled.
- Ross Video recommends that you do not connect more than 5 MediaManager clients to a single switcher at the same time.

The MediaManager Window

The MediaManager window provides a graphical interface to the Media-Store. From this window, you can load stills or animations from the internal cache or USB into a Media-Store channel or edit the on-air properties. Media-Store channels have a red background when on-air and green when going on-air with the next transition.

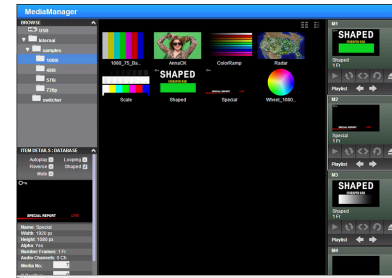


Figure 19: MediaManager Window

Tip: The film-strip symbol (🎞️) on a thumbnail indicates that the media item is an animation, the key symbol (⓪→) indicates that the still or animation has an alpha, and the speaker symbol (🔊) indicates that the media item has audio associated with it.

Stills and animations can be loaded into a channel by either selecting the channel and double-clicking on the file, or by dragging a file and dropping it onto the channel. When a channel or file is selected, the properties for the animation or still can be viewed in the **ITEM DETAILS** area.

Note: If the files on your USB are new, it takes about 2 seconds per file for the switcher to generate the thumbnail for the MediaManager. Once all the thumbnails are generated, they are displayed in the MediaManager window.

Animation Controls

The MediaManager interface allows you to manually control the play-out of an animation.

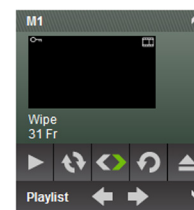



Figure 20: Media-Store Channel — Animation Controls

Table 4: Animation Controls

Icon	Name	Description
	Play	Play the animation loaded in the Media-Store channel.

Icon	Name	Description
	Looping	Turns Looping of the animation on or off.
	Reverse	Toggle the direction that the animation is played in.
	Recue	Loads the animation again.
	Eject	Eject the current still or animation from the Media-Store channel. This is the same as loading media number 000 on the panel.

Icon	Name	Description
	Delete	Delete the selected item from the playlist. This does not delete the item, or clear the Media-Store channel.
	New Playlist	Clears the current playlist.
	Load or Save Playlist	Allows you to load, save, or delete a playlist on the switcher. If you delete a playlist that was loaded into a Media-Store channel, it does not clear that channel.
	Expand or Collapse	Expand or Collapse the playlist area for the Media-Store channel.

Playlists

Playlists allow you to create a rundown of stills or animations that you want to load into a Media-Store channel. Using the left and right arrows, you can advance to the next or previous still or animation in the playlist.

Note: Items on the playlist are not pre-cached. As you advance to the next item in the list, the switcher must load that still or animation. Depending on what you are loading, and if the item has been loaded before, this could take a few seconds.

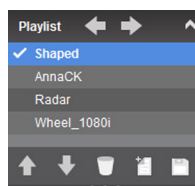


Figure 21: Playlist

Table 5: Playlist Controls

Icon	Name	Description
	Previous	Advance to the previous item in the playlist. The item in the playlist that is being shown on the Media-Store channel indicated with a check-mark. The playlist does not loop back to the top when it reaches the last item.
	Next	Advance to the next item in the playlist.
	Up and Down	Move the currently selected item up in the playlist.
	Up and Down	Move the currently selected item down in the playlist.

Custom Controls

Once programmed, a custom control (CC) can be played back by pressing a button. The custom control can be as simple as triggering an output GPI pulse, or as complex as recalling a specific memory register on an ME, performing a switcher transition, and selecting a group of keys.

You can record, edit, and run custom controls from the Custom Control node in DashBoard.

Custom Control Setup

The custom control interface on your switcher can be customized to show custom control names on the mnemonics just below the Custom Control bus, or automatically add delays between each custom control event as you are recording a custom.

To Set Custom Control Options

1. Press **CC > NEXT**.
2. Use the **Row** knob to select the control panel row that you want to set how the custom control names appear on the mnemonics.
3. Use the **CCMem** knob to set how custom control names are shown on the mnemonics.
 - **Off** — only video source names are shown
 - **Split** — mnemonics are split with custom control names on the top and source names on the bottom
 - **Full** — only custom control names are shown
4. If you selected **Split**, use the **MColor** knob to select whether the mnemonics use the bus map color (**Xpt**) or the custom control color (**CC**).
5. Press **NEXT**.
6. Use the **CCPaus** knob to set whether pauses are added automatically after each event.
 - **Manual** — pauses are not added automatically
 - **Record** — each command is automatically separated from the previous command by a pause equal to the real-time delay between the user entering commands

Recording Custom Controls

When you create a custom control, you record a series of button presses on the panel, as well as special functions, that are played back when you run the custom control.

Almost any action or setting can be stored in a custom control, with the following exceptions:

- Diagnostic Functions
- Confirmation Dialogs
- Panel-Specific Functions

Note: It is recommended that you use a control panel for recording custom controls.

To Record a Custom Control

A basic custom control records a series of button presses on the control panel.

Tip: If the CCPaus feature is set to Record, pauses will automatically be added between button pressed. If it is set to Manual you will have to go back and edit the custom control to add the pauses.

1. Press **MENU > BANK 1 > START/STOP**. Click **Navigation Menu > Custom Control > Editor (Beta)**.
2. Use the **Bank** knob to select the bank that the custom control you want to record will be stored on. Click **Bank X** to select the bank that the custom control you want to record will be stored on.
3. Use the **CC** knob to select the custom control that you want to record to, or select the custom control on the bus directly. If the custom control already has a macro recorded, an * is shown next to the number. Click the custom control to select the custom control that you want to record to. If the custom control already has a macro recorded, the name of the custom control is shown in the list.
4. Press **Record Start** to start recording. Click **Record**.
5. Insert the events you want to record. These can include source selections, key types, transitions, and menu selection, for example. Special functions can also be inserted.

Each custom control can have a maximum of 998 events, plus the End event.
6. Press **Record Stop** to finish recording. Press **Stop Recording** to finish recording.

Tip: Press CANCELCancel if you do not want to store your changes to the custom control.

Related information

[Setup](#) on page 52

[Editing a Custom Control](#) on page 54

Special Functions

Special functions allow you to include events not associated with a button press into a custom control. A special function can be inserted into any existing

custom control, or used when creating a new custom control.

Table 6: Special Functions

Function	Definition
Hold	Allows you to place a command in a custom control that will stop the custom control at the hold event. You must press the custom control button again, or use a GPI trigger, to continue the custom control.
Pause	Allows you to place a command in a custom control that will stop a custom control at the pause event. The length of the pause is set when the pause is inserted. When holding the INSERT button, pauses are shown as Px , where x is the length of the pause in frames.
Loop	Allows you to have a custom control run continuously until stopped, or a Cancel/Cancel All custom control command is executed from another custom control.
GPO	Allows you to trigger a pre-selected GPI output using a custom control. The specific GPI output is set when the GPO command is inserted.
CutKey Cut Key	Allows you create a custom control that will cut keys on or off. The specific key and whether the key is cut on or off is set when the key cut command is inserted.
TrnKey Trans Key	Allows you to create a custom control that will transition keys on or off. The specific key and whether the key is transitioned on or off is set when the key transition command is inserted.
IncKey Include Key	Allows you to create a custom control that will include a key with the next transition to take the key on-air, or off-air. The specific key and whether it should go on-air, or off-air is set when the include key command is inserted.
Resume	Allows you to resume a particular custom control that is at a hold. The specific custom control is set when the resume is inserted. If the target custom control is not at a hold event, the resume command will not start the target custom control.
Cancel	Allows you to stop a particular custom control. The specific custom control is set when the cancel is inserted.
CancelAll Cancel All	Allows you to stop all running custom controls.
State	Allows you to embed the entire state of the switcher into a custom control. A state in a custom control behaves just like a memory.

To Insert a Special Event into a Custom Control

A special function can be inserted into any existing custom control, or used when creating a new custom control.

1. Start recording or editing your custom control where you want to insert the special event.
2. Press **INSERT**. Click **Insert Event**.
3. Use the **INSERT** knob to select the event you want to insert. Click an **Event** button for the event you want to insert.

You can also press and hold the **INSERT** button and press the source button on the custom control bus for the event you want to insert. The event names are shown on the mnemonics.

- **Hold** — press the **Insert** knob to insert a hold event **Hold** — insert a hold event
- **Pause** — use the **Secs** and **Frames** knobs to enter the length of the pause event **Pause** — enter the length of the pause event in the **Seconds** and **Frames** fields
- **Loop** — press the **Loop** knob to loop the custom control back to the beginning **Loop** — loop the custom control back to the beginning
- **GPO** — use the **Pin** knob to select the GPI output **GPO** — click a **Pin** button to select the GPI output
- **CutKey** — use the **Key** knob to select the key, and the **State** knob to select whether you want the key cut on or off **Cut Key** — click an **ME**, **Key**, and **State** button to select whether you want the key cut on or off
- **TrnKey** — use the **Key** knob to select the key, and the **State** knob to select whether you want the key transitioned on or off **Trans Key** — click an **ME**, **Key**, and **State** button to select whether you want the key transitioned on or off
- **IncKey** — use the **Key** knob to select the key, and the **State** knob to select whether the key should be transitioned on-air or off-air with the next transition **Include Key** — click an **ME**, **Key**, and **State** button to select whether the key should be transitioned on-air or off-air with the next transition
- **Resume** — use the **Bank** knob to select the custom control bank, and the **CC** knob to select which custom control to resume

- **Resume** — enter the bank (**Bank**) and custom control (**CC**) you want to resume
 - **Cancel** — use the **Bank** knob to select the custom control bank, and the **CC** knob to select which custom control to cancel **Cancel** — enter the bank (**Bank**) and custom control (**CC**) you want to cancel
 - **CancelAll** — press the **CancelAll** knob to insert a cancel all custom controls command
 - **Cancel All** — insert a cancel all custom controls command
 - **State** — press the **Insert** knob to insert the state **State** — insert the switcher state
4. Press the **Insert** knob to insert the event. Click **Insert** to insert the event.
 5. Press **START/STOP**. Click **Stop Recording**.

Running a Custom Control

Once a custom control has been programmed, you can run that custom control by pressing the button that the custom control was recorded to.

Keep the following in mind when running custom controls:

- A custom control will continue to run until it reaches a hold event, is stopped by another custom control, you edit a custom control, or the custom control reaches the end.
- When a custom control is running, the button on the custom control bus is red.
- When a custom control is held (at a Hold event), the button on the custom control bus flashes white.
- You can run multiple custom controls at the same time. The number of running custom controls is shown on the display when in custom control mode.
- You can stop a running custom control by pressing the red custom control button on the custom control bank.
- You can stop all running custom controls by selecting a custom control with no events recorded to it.
- A maximum of 128 custom controls can be run at the same time.

To Run a Custom Control

Once a custom control has been recorded, you can run that custom control at any time.

1. Press **MENU**. Click **Navigation Menu > Custom Control > Shot Box**.

2. Select the bank that the custom control you want to run is on by pressing the bank button.
3. Select the custom control you want to run by pressing the source button on the custom control bus. Click a custom control button to run that specific custom control.
The custom control starts to play immediately.

Editing a Custom Control

After you have recorded a custom control, you can go back and edit that custom control to add or remove events.

*Tip: Custom controls can also be edited from the **Custom Control** node in DashBoard.*

To Edit a Custom Control

When editing a custom control, you can delete and insert events at any point in the custom control, or append events to the end.

*Tip: When editing a custom control, press **RUN EVENT** to run the currently selected event. This can help you diagnose problems in a custom control.*

1. Press **MENU > BANK 1 > EDIT**.
2. Use the **Bank** knob to select the bank that the custom control you want to record will be stored on, or select the bank button directly.
3. Use the **CC** knob to select the custom control that you want to edit, or select the custom control on the bus directly. The custom control will have an * next to the number.
4. Use the **Func** knob to select where and how you want to edit the custom control.
 - **Edit** — select the position in the custom control to edit events
 - **Append** — add events to the end of the custom control
5. Press the **Func** knob to start editing.

*Tip: You can also start editing a custom control by pressing and holding **EDIT** and selecting the bank and custom that you want to edit to.*

The display changes to show the name and duration of the custom control, and the currently selected event in the custom control.

6. Delete an event in a custom control as follows:
 - a) Use the left knob to select the event you want to delete. You can also use the **PREV** and **NEXT** buttons.
 - b) Press **DELETE**.

7. Insert an event into a custom control as follows:
 - a) Use the left knob to select the event you want to insert an event before. You can also use the **PREV** and **NEXT** buttons.
 - b) Press **INSERT**.
 - c) Insert the events you want.
 - d) Press **START/STOP** to finish recording.

Naming Custom Controls

Each custom control can be given a unique name and mnemonic color. The name is shown in the mnemonic display when CCMnem is set to Split or Full. Each custom control can be given a unique name. The name is shown on the custom control button.

To Name a Custom Control

The procedure to name or rename a custom control is the same.

1. Press **MENU > BANK 1 > EDIT** Click **Navigation Menu > Custom Control > Editor (Beta)**.
2. Use the **Bank** knob to select the bank that the custom control you want to name is stored on, or select the bank button directly. Click **Bank X** to select the bank that the custom control you want to name is on.
3. Use the **CC** knob to select the custom control that you want to name, or select the custom control on the bus directly. Click the custom control that you want to name.
4. Use the **Func** knob to select **Rename**.
5. Press the **Func** knob.
6. Select a name as follows:
 - a) Use the **Pos** knob to select the character position to edit. A name can have up to 8 character.
 - b) Use the **Char** knob to select a character for the current position.
7. Press **NEXT**.
8. Use the **Size** knob to select the text size for the mnemonic label.
 - **Small** — 6 characters displayed on the top line, and 2 on the bottom
 - **Medium** — 4 characters displayed on the top line, and 4 on the bottom
 - **Large** — first 2 characters are displayed
9. Use the **Color** knob to select the background color of the mnemonic.

10. Use the **Inv** knob to swap the color of the text and the background.

The Invert (Inv) selection is not applied when the mnemonic is in split mode. In split mode, the top half of the display is inverted, and the bottom is not.
11. Enter the new name of the custom control in the name field next to the bank.

Deleting Custom Controls

Any custom control on the switcher can be deleted to remove unused customs to free up space for new custom controls.

To Delete a Custom Control

There is no undo for this delete function.

1. Press **MENU > BANK 1 > DELETE** Click **Navigation Menu > Custom Control > Editor (Beta)**.
2. Use the **Bank** knob to select the bank that the custom control you want to delete is stored on, or select the bank button directly. Click **Bank X** to select the bank that the custom control you want to delete is on.
3. Use the **CC** knob to select the custom control that you want to delete, or select the custom control on the bus directly. Click the custom control button that you want to delete.
4. Press the **Func** knob. Click **Delete**.
5. Press the **Confrm** knob to delete the custom control. Click **Delete** to delete the custom control.

Copying and Pasting Custom Controls

The contents, or events, of a custom control can be copied from one custom control and pasted to another. Along with the events, the name and mnemonic settings are also copied.

To Copy and Paste a Custom Control

1. Press **MENU > BANK 1 > Edit**. Click **Navigation Menu > Custom Control > Editor (Beta)**.
2. Use the **Bank** knob to select the bank that the custom control you want to copy is on, or select the bank button directly. Click **Bank X** to select the bank that the custom control you want to copy is on.

-
3. Use the **CC** knob to select the custom control that you want to copy, or select the custom control on the bus directly. If the custom control has a macro recorded, an * is shown next to the number. Click the custom control that you want to copy.
 4. Press **Copy**.
 5. Click **Copy**.
 6. Select the custom control that you want to paste into.
 7. Press **Paste**.
 8. Click **Paste**.

Switcher Soft Reset

If required, the switcher can be reset to return it to a user-defined default setting, or the factory default state. A reset can be performed for the entire switcher, or individual components, such as keys.

Soft Reset

The software reset returns the switcher to the default state. Black is selected on all buses, all keys are cut off-air, and the transition rate is set back to default. This is useful if you need to return the switcher to a known state.

To Reset the Switcher Software

1. Press and hold **MENU**.
2. Press **Reset All**.

Custom Reset Settings

You can customize many of the default switcher parameters and save them as a user-defined reset settings. These custom reset settings can then be recalled when you want to return the switcher to a previous state.

To Save a Custom Reset Setting

The Custom Reset Setting, or RState, saves how you want the switcher to be configured when it powers up, or when you recall the RState manually.

You can customize many of the default switcher parameters and save them as a user-defined custom reset.

*Tip: Custom reset settings can also be set from the **Memory** > **RState** tabs on the Live Assist node in DashBoard.*

1. Press **MENU** > **RESET** > **NEXT**. Click **Navigation Menu** > **Live Assist** > **Memory** > **RState**.
2. Use the **Attrib** knob to select **Media**.
3. Use the **Media** knob to select **Media1**.
4. Click **AuxX**, **MediaX**, **MiniMEX**, and **MultiScreenX** to select the buses or channels that are reset with a switcher reset.

*Tip: Click the **All** button to select or de-select all the items in that category.*

5. Use the **Value** knob to select whether the Media-Store channel is reset with a switcher reset or not.
 - **NoRst** — the Media-Store channel is not reset
 - **Reset** — the Media-Store channel is reset with a switcher reset
6. Repeat this for the remaining Media-Store channels.
7. Use the **Attrib** knob to select **Aux**.
8. Use the **Aux** knob to select **Aux 1**.
9. Use the **Value** knob to select whether the Aux bus is reset with a switcher reset or not.
 - **NoRst** — the Aux bus is not reset
 - **Reset** — the Aux bus is reset with a switcher reset
10. Repeat this for the remaining Aux buses.
11. Use the **Value** knob to select whether the Aux bus is reset with a switcher reset or not.
 - **NoRst** — the Aux bus is not reset
 - **Reset** — the Aux bus is reset with a switcher reset
12. Repeat this for the remaining Aux buses.
13. Use the **Attrib** knob to select **MiniME**.
14. Use the **MiniME** knob to select **MME 1**.
15. Use the **Value** knob to select whether the MiniME™ is reset with a switcher reset or not.
 - **NoRst** — the MiniME™ is not reset
 - **Reset** — the MiniME™ is reset with a switcher reset
16. Repeat this for the remaining MiniME™ outputs.
17. Press **NEXT** > **NEXT** > **NEXT**.
18. Press **RState Save** and **Confirm**. Click **Save RState** and **Yes**.

To Load a Custom Reset Setting

The Custom Reset Setting, or RState, is recalled every time the switcher is powered on, or it can be recalled manually.

*Tip: Custom reset settings can also be set from the **Memory** > **RState** tabs on the Live Assist node in DashBoard.*

1. Press **MENU** > **RESET**. Click **Navigation Menu** > **Live Assist** > **Memory** > **RState**.
2. Press **RState Load**. Click **Load RState** and **Yes**.

You can also press and hold **MENU** and press **Reset All**.

Factory Default Settings

You can restore the switcher to the factory default state. All installation and personality settings are reset.

To Factory Reset the Switcher

1. Press **MENU > Reset > NEXT > NEXT > Factory Reset.**
2. Press the **Confirm** knob to load the factory default settings.

Resetting Individual Components

You can reset only the component that you want, instead of the entire switcher. Individual MEs, keys, aux buses, dissolves, wipes, and menu items can be reset.

Table 7: Resetting Individual Components

To Reset	Buttons to Press	Result
Wipes	WIPE and RESET	all wipe parameters, including position, pattern, and border, are reset
Dissolves	DISS and RESET	all dissolve parameters are reset
Keys	KEY X SEL and RESET	key parameters for key X including clip, gain, and mask, are reset, but not key type, or chroma key color selection (each keyer is reset individually) (X is the number of the key)
MEs	STORE and RECALL for the selected MEs	ME X parameters, including source selections, are reset (each ME is reset individually) (X is the number of the ME)
	ME X STORE and ME X RECALL (CB1 and CB2 only)	
Aux Buses	AUX X and RESET	Aux bus X parameters, including source selections, are reset (each Aux is reset individually) (X is the number of the aux bus)
Menu Items	double-press the knob for the value you want to reset	the value for that knob is reset

Glossary

Interlaced

An Interlaced video format starts at the top of the screen and draws all the odd number scan lines and then all the even number scan lines in sequence. This results in half the image being drawn in one pass and the other half of the image being drawn in the second. These two passes are called Fields, where the first pass is called Field 1 and the second pass is called Field 2. When both Field 1 and Field 2 have been drawn, resulting in a complete image, you have a single Frame.

Progressive

A Progressive scan video format draws each scan line in sequence, starting from the top of the screen and working to the bottom. Unlike Interlaced, with Progressive scan the entire image is drawn at one time, in a single pass. This means that there are no fields in a Progressive scan image.

Auto Key

A pairing of two video signals, a key video and a key alpha, to create a key. In the switcher, you associate the fill and alpha so that the switcher knows which alpha to use when the video is selected.

Auto Transition

An automatic transition in which the manual movement of the fader handle is simulated electronically. The transition starts when the **AUTO TRANS** button is pressed and takes place over a pre-selected time period, measured in frames.

Chroma Key

Chroma Key is a key in which the hole is cut based on a color value, or hue, rather than a luminance value or alpha signal. The color is removed and replaced with background video from another source.

Cut

An instantaneous switch from one video signal to another.

Dissolve

A transition from one video signal to another in which one signal is faded down, while the other is simultaneously faded up. The terms mix or cross-fade are often used interchangeably with dissolve.

Field

One half of a complete picture (or frame) interval containing all of the odd, or all of the even, lines in interlaced scanning. One scan of a TV screen is called a field; two fields are required to make a complete picture (which is a frame).

Force, Mask

An effect that forces the masked region to the foreground but is not bound by the key. For example, if you have a key and apply a mask to it. The masked area is bound by the edges of the key. When force is turned on, the masked area is filled with the video from the key (nothing appears masked) but you can move the mask outside of the key and the key video is still filling the masked region.

Frame

One complete picture consisting of two fields of interlaced scanning lines.

File Transfer Protocol

A network protocol that is used to transfer files from one host computer to another over a TCP-based network.

Gain

Gain represents the range of signal values present in a video signal from a lowest to a highest point (from black to white for example). Increasing gain expands this range, while decreasing gain compresses this range. Clipping occurs if applied gain changes cause output signal values to fall outside the allowable range. Generally, increasing the gain for a specific color component causes the video signal colors to become increasingly saturated with that color. Similarly, decreasing the gain for a specific color component progressively removes that color component from the output video signal.

Gamma

Gamma corrections introduce non-linear corrections to a video signal. A gamma correction can be described as taking a point on the output versus input video signal line and pulling it perpendicularly away from the line. The result is a Bezier curve between the start, the new point, and the end point. Generally, increasing the gamma value adds more of the component to the video signal in the location of the gamma offset point. Decreasing the gamma value reduces the amount of the component in the video signal in the location of the gamma offset point. Moving the gamma offset point allows you to select which part of the input video

signal receives the gamma correction. For example, if you increase the red gamma correction to the part of the video signal that has no red component you will add red to those areas while having little effect on areas that already contain a significant amount of red. This allows you to add a red tint to the image while minimizing the amount of red-clipping that occurs.

General Purpose Interface

A simple high/low signal that is used to trigger an action either on an external device or on the switcher. A GPI can be an input or an output to the switcher.

High Definition

A high definition (720p, 1080i, or 1080p/3G) video signal.

Hue

The characteristic of a color signal that determines whether the color is red, yellow, green, blue, purple, etc. (the three characteristics of a TV color signal are chrominance, luminance, and hue). White, black, and gray are not considered hues.

Hue Rotation

Hue rotate affects the color of the entire video signal by rotating the input video hues. This produces an output video signal with colors that are shifted from their original hues. By rotating colors around the wheel, hue values will shift. For example, a clockwise rotation where yellows become orange, reds become magenta, blues become green. The more rotation applied, the further around the wheel colors are shifted.

Key

An effect produced by cutting a hole in the background video, then filling the hole with video or matte from another source. Key source video cuts the hole, key fill video fills the hole. The video signal used for cut and fill can come from the same, or separate, sources.

Key Alpha

The video signal which cuts a hole in the background video to make a key effect possible. Also called Key Video or Source. In practice, this signal controls when a video mixer circuit will switch from background to key fill video.

Key Invert

An effect that reverses the polarity of the key source so that the holes in the background are cut by dark areas of the key source instead of bright areas.

Key Mask

A keying technique in which a shape is combined with the key source to block out unwanted portions of the key source.

Key Video

A video input which is timed to fill the hole provided by the key source video. An example of key video is the video output of a character generator.

Linear Key

Linear keys make it possible to fully specify the transparency of a key from opaque, through transparent, to fully off. The transparency is specified by the key alpha that is associated with the key video. A keyer capable of a linear key converts the key signal voltage directly to the transparency effect on the screen.

Mnemonics

A green, orange, or yellow display used to show the names of a source above or below the source button or used as a custom command or pattern button.

Offsets

Offsets shift the video signal by a set amount. Depending on the offset applied, different parts or all of the video signal may be affected. Clipping occurs if applied offsets cause output signal values to fall outside the allowable range.

Pre-Delay

A pre-delay is a delay that is inserted into a transition between the triggering of a GPI output and performing the transition. The length of the pre-delay is usually the length of time your video server requires to start playing a clip or your character generator required to load a page.

RossTalk

An ethernet based protocol that allows the control over Ross devices using plain english commands.

Standard-Definition

A standard definition (480i or 576i) video signal.

Self Key

A key effect in which the same video signal serves as both the key signal and key fill.

Shaped Key

An additive key where the Key Alpha cuts a hole based on the monochrome value of the alpha. Shades of gray are translated into either white or black, giving the key a hard edge. Shaped Key alphas are sometimes used with Character Generators to cut very precise holes for the fill.

Split Key

A Split key allows you to assign a different alpha source for a key than the fill/alpha associations that are set up during configuration or to use a separate alpha source for a Self key.

Tally

An indicator which illuminates when the associated button, or control, is selected or is on-air.

Unshaped Key

A multiplicative key where the Key Alpha cuts a hole based on the gradient values of the alpha. Shades of gray are translated into transparency levels, giving the key a soft edge. Unshaped Key alphas can also be considered true linear alphas. Key alphas are set to unshaped by default.

Index

A

- Abort Transition [22](#)
- AES Out [46](#)
- AES Output [47](#)
- Allocated DVEs [18](#)
- Ancillary Mode [18](#)
- Animations [46](#)
- Audio [46](#)
- Audio Mixer Control [9](#)
- Audio Out, Media-Store [47](#)
- Audio Output, Media-Store [46](#)
- Auto Select Keys [32](#)

B

- BlackStorm Control [9](#)
- Bus Hold [40](#)
- Bus Select Buttons
 - ViewControl [19](#)

C

- Camera Control [9](#)
- Chroma Key [33](#)
- Clean Feed [17](#)
- Clear Memories [44](#)
- Control Panel
 - Areas [12](#)
- Control Panel, Top [13](#)
- Control, External Devices [9](#)
- Copy Keys [38](#)
- CPU Temperature [18](#)
- Custom Control Buttons
 - ViewControl [19](#)
- Custom Controls
 - Copy [55](#)
 - DashBoard [18](#)
 - Delete Event [54](#)
 - Deleting [55](#)
 - Editing [54](#)
 - Insert Event [55](#)
 - Naming [55](#)
 - Paste [55](#)
 - Recording [52](#)
 - Run Event [54](#)
 - Running [54](#)
 - Setup [52](#)
 - Special Functions
 - Cancel [53](#)
 - CancelAll [53](#)
 - CutKey [53](#)
 - GPO [53](#)
 - Hold [53](#)
 - IncKey [53](#)
 - Loop [53](#)

- Pause [53](#)
- Resume [53](#)
- State [53](#)
- TrnKey [53](#)
- Custom Controls (CC) [52](#)
- Cut Transitions [23](#)

D

- DashBoard
 - Configuration [18](#)
 - Custom Controls [18](#)
 - Live Assist [18](#)
 - MediaManager [18](#)
 - PaneLINK [18](#)
 - Status [18](#)
- Default
 - Factory [58](#)
- Device Control [9](#)
- Dissolve Transitions [23](#)
- DVE
 - Key
 - Cropping [35, 35, 36, 36, 36](#)
 - DVE Allocation [35](#)
 - DVE Transitions [25](#)

E

- Editing Custom Controls [54](#)
- EFF DISS [41](#)
- EFF RATE [41](#)
- Effects Dissolve
 - Duration [41](#)
- Engine Type [18](#)
- External Reference [18](#)

F

- Factory Default [58](#)
- Fan#1 OK [18](#)
- Fan#2 OK [18](#)
- FlexiClean [17](#)
- Fly Key [35](#)
- FPGA Temperature [18](#)

K

- Key Mode [31](#)
- Key RATE [23, 23, 24, 25](#)
- Key Swap [38](#)
- Keyer Transition Buttons
 - ViewControl [19](#)
- Keying
 - Auto Select [32](#)
 - Chroma Key [33](#)
 - Cropping [35, 35, 36, 36, 36](#)

- DVE [35](#), [35](#), [35](#), [36](#), [36](#), [36](#)
- Invert [31](#)
- Key Priority [31](#)
- Mask [37](#)
- Menu Overview [31](#)
- MiniME [31](#)
- Self Key [32](#)
- Split [33](#)
- Split Keys [37](#)
- Keying, Copying [38](#)

L

- Live Assist
 - PaneLINK [18](#)
- Load Custom Reset [57](#)
- Loading Media-Store Images [47](#)

M

- Mask [37](#)
- Mattes [29](#)
- ME
 - Selection [16](#)
- ME RATE [23](#), [23](#), [24](#), [25](#)
- Media Manager
 - Playlist
 - Collapse [51](#)
 - Delete [51](#)
 - Expand [51](#)
 - Load [51](#)
 - New [51](#)
 - Next [51](#)
 - Previous [51](#)
 - Save [51](#)
- Media Transitions [25](#)
- Media-Store
 - Animations [46](#)
 - Audio [46](#)
 - File Specifications [47](#)
 - Loading [47](#)
 - Menu Overview [48](#)
- Media-Store, Audio Out [46](#)
- Media-Store, Capture [48](#)
- MediaManager
 - connection status [50](#)
 - DashBoard [18](#)
 - Eject [51](#)
 - Flip Flop [51](#)
 - login [50](#)
 - Looping [51](#)
 - Menu Bar [50](#)
 - Play [50](#)
 - Playlist
 - Move Down [51](#)
 - Move Up [51](#)
 - Playlists [51](#)
 - Re-Cue [51](#)
- MediaManager GUI
 - layouts [50](#)

- Memories
 - Access Mode [39](#)
 - Attributes [41](#)
 - Bus Hold [40](#)
 - Effects Dissolve [41](#)
 - MemoryAI [41](#)
 - Recall Mode [41](#)
 - Storing [39](#)
- Memories, clear [44](#)
- Memory AI [41](#)
- Memory Undo [40](#)
- Menus
 - Auto-Follow [14](#)
 - Navigating [14](#)
 - Overview [14](#)
- MiniME
 - Keying [31](#)
 - Selection [16](#)
 - Transitions [21](#)
- MultiViewer [10](#), [17](#), [17](#)

O

- Overview, Control Panel [12](#)

P

- PaneLINK [18](#)
- Patterns [29](#)
- Pre-Delay Override [22](#)
- Preview [17](#)

R

- Re-Entry [16](#)
- Re-Entry Timing [17](#)
- Recall Mode [41](#)
- Reference OK [18](#)
- Reference Source [18](#)
- Reset
 - Custom
 - Loading [57](#)
 - Saving [57](#)
 - Individual [58](#)
- Reset Software [57](#)
- RoboCam Control [9](#)
- Rosstalk Port [18](#)
- RState, Load [57](#)
- RState, Save [57](#)

S

- Save Custom Reset [57](#)
- Self Key [32](#)
- Serial Number [18](#)
- Server Control [9](#)
- Sets
 - Loading [45](#)
 - Storing [45](#)
- Setup, External Devices [9](#)

Software Version [18](#)
Sources
 Selecting [16](#)
Sources, Layering [16](#)
Sources, Re-Entry [16](#)
Split Key [37](#)
Split Keys [33](#)
Status [18](#)
Storing Memories [39](#)

T

Temperature OK [18](#)
Timecode [18](#)
Timing Windows, Re-Entry [17](#)
Transition
 Flip-Flop [21](#)
 Pre-Delay Override [22](#)
Transition Buttons
 ViewControl [19](#)
Transition Limit [27](#)
Transition Rate [21](#)
Transitions
 Aborting [22](#)
 Cuts [23](#)
 Direction [21](#)
 Dissolves [23](#)
 DVE [25](#)
 Flip-Flop [24, 25](#)
 GPO Trigger [27](#)
 Limit [27](#)
 Media [25](#)
 Menu Overview [21](#)
 MiniME [21](#)
 Pause [21](#)
 Performing [21](#)
 Rate [21](#)
 Roll Clip [21](#)
 Wipes [24](#)
Trigger GPO [27](#)
TSL UMD Port [18](#)

U

Undo [40](#)

V

Video Layering [16](#)
Video Mode [18](#)
Video Processing and Flow [15](#)
Video Server Control [9](#)
Video Sources
 Selecting [16](#)
ViewControl
 Bus Selection Buttons [19](#)
 Button Setup [19](#)
 Custom Control Buttons [19](#)
 Keyer Transition Buttons [19](#)
 Transition Buttons [19](#)

W

Washes [29](#)
WhiteFlash [23](#)
Wipe Transitions [24](#)

X

XPression Control [9](#)